


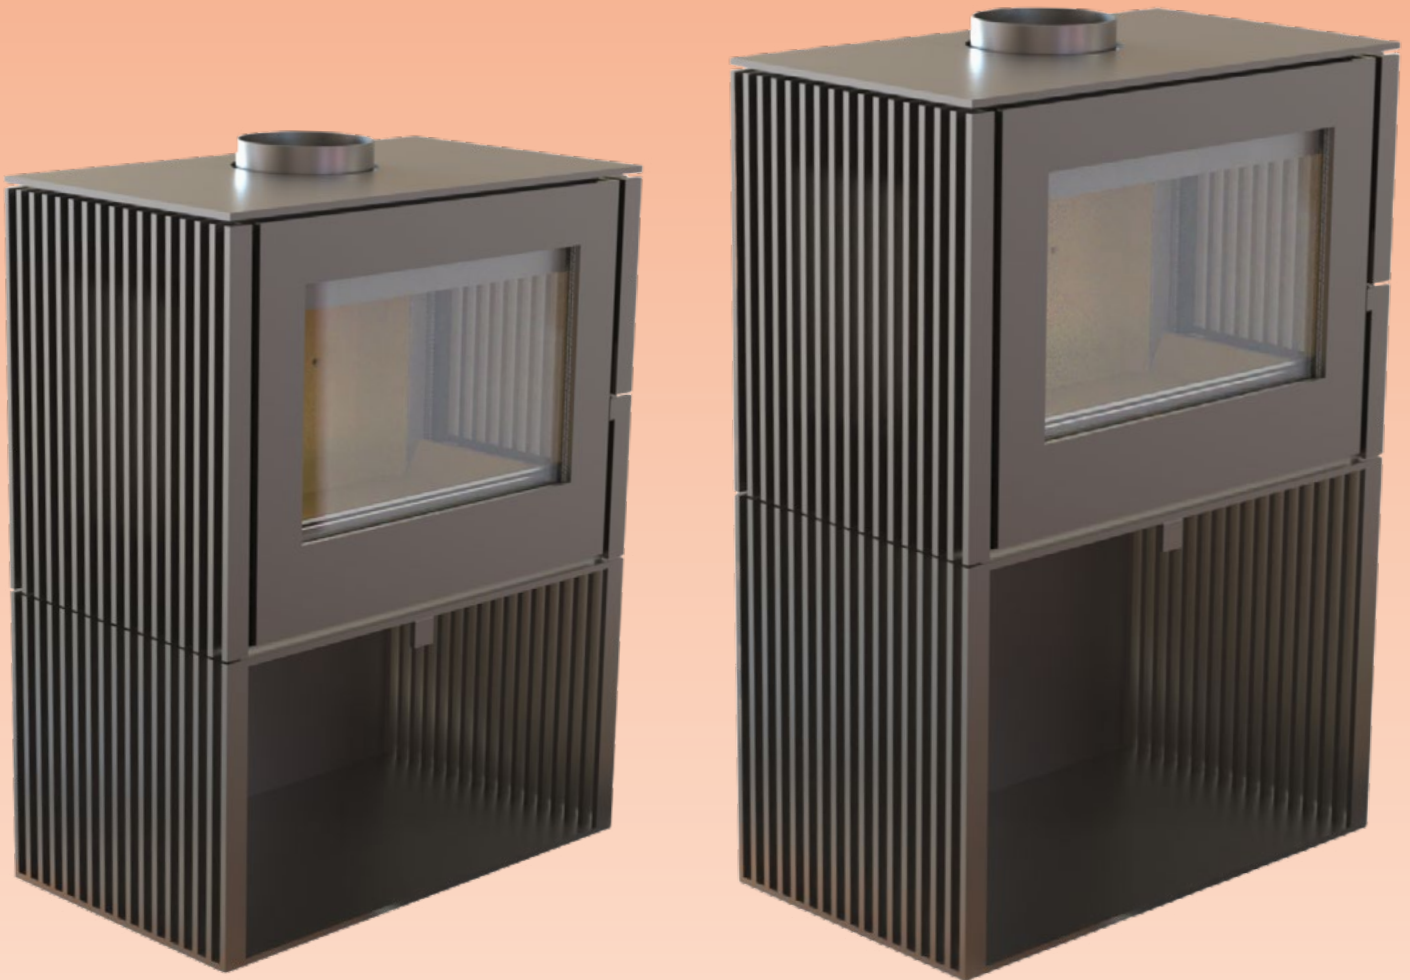

Trimline Woody Loft 3SL/3SLH

INSTALLATION AND OPERATING INSTRUCTIONS

For other languages, download the manual, open it in Acrobat Reader and choose the desired language with the buttons on the bottom side of this page.

CONTENTS

1	GENERAL	3
1.1	Intended use	3
1.2	Flue gas discharge	3
1.3	Product standards and guidelines	3
2	FUEL	4
2.1	What fuel can you use and what should you pay attention to?	4
2.2	Loading fuel	4
2.3	Inappropriate fuels include	4
2.4	Dry wood burns best	4
2.5	White smoke	4
2.6	Combustion air	4
2.7	Ash removal	4
3	SAFETY	5
3.1	Instructions	5
3.2	Installation precautions/safety instructions	5
3.3	Safety instructions for operation	5
3.4	Environmental safety instructions	6
4	INSTALLATION OF THE APPLIANCE	7
4.1	Converting the top connection to a rear connection of the flue gas duct	7
4.2	Installing the appliance	7
4.3	Distance from flammable materials	8
5	FLUE GAS DISCHARGE DUCTS	9
5.1	Instructions	9
5.2	Requirements for flue gas exhaust ducts	9
6	OPERATING INSTRUCTIONS	10
7	MAINTENANCE	12
8	TROUBLESHOOTING	13
9	GUARANTEE	14
9.1	The guarantee does not cover parts that are designed to wear	14
9.2	The guarantee will expire in the following cases	14
10	TECHNICAL SPECIFICATIONS AND PARAMETERS WOODY LOFT 3SL	15
11	IDENTIFICATION PLATE WOODY LOFT 3SL	15
12	TECHNICAL SPECIFICATIONS AND PARAMETERS WOODY LOFT 3SLH	16
13	IDENTIFICATION PLATE WOODY LOFT 3SLH	16
14	INFORMATION ABOUT DISPOSING OF THE APPLIANCE	17
14.1	Reuse	17
Appendix 1	DIMENSIONAL DRAWINGS	18
Appendix 2	DOOR CLOSED AND AJAR	20
Appendix 3	BAFFLE PLATE AND EFFICIENCY PLATE	21
Appendix 4	REMOVING SIDE PANELS	22
Appendix 5	DIMENSIONAL DRAWINGS INTERIOR PLATES	23
Appendix 6	INSTALLATION INFORMATION, SERVICE AND MAINTENANCE LOGBOOK	24
Appendix 7	DECLARATION OF PERFORMANCE WOODY LOFT 3SL	25
Appendix 8	DECLARATION OF PERFORMANCE WOODY LOFT 3SLH	26
Appendix 9	ENERGY LABEL WOODY LOFT 3SL/ 3SLH	27
Appendix 10	PRODUCT DATA SHEET WOODY LOFT 3SL	28
Appendix 11	PRODUCT DATA SHEET WOODY LOFT 3SLH	29
Appendix 12	WOODY LOFT 3SL PRODUCT INFORMATION	30
Appendix 13	WOODY LOFT 3SLH PRODUCT INFORMATION	31

thermoCet International B.V.
Laagerfseweg 27
3931 PC Woudenberg
The Netherlands
www.trimlinefires.com



1 GENERAL

We hope you enjoy your wood-burning appliance. Read these instructions carefully before installing and using the appliance. Keep these instructions in a safe place. In the event of a problem with your appliance, please always provide the model and serial number, which can be found on the appliance.

Your receipt of purchase is your proof of guarantee.

NOTE

- 1 The appliance must be installed, connected and checked by an installation technician qualified to national, regional, local and European standards and regulations.

The appliance is delivered complete. Check the appliance immediately after delivery to confirm that it has not been damaged during transport. If it has been damaged in any way, please inform your supplier immediately, providing as many details as possible. Your appliance has been coated with heat-resistant enamel that can withstand extremely high temperatures. Allow the appliance to burn at the highest setting and ventilate the room thoroughly during its first hours of use. As the enamel cures, a non-hazardous smell and/or some smoke may be emitted.

1.1 Intended use

This appliance is designed for indoor use to heat the room in which it is installed. It may not be used for any other purpose.

- 1 **Not as primary heating:** The appliance is unsuitable for use as a primary heating source.
- 2 **Fuel:** Use only wood logs or wood briquettes as fuel. Other fuels are not to be used.
- 3 **Use with the door closed:** The appliance must always be used with the door closed.
- 4 **Installation location:** The appliance may only be used in locations that meet the installation requirements.
- 5 **Usage:** The appliance is intended for intermittent use, not for continuous use.
- 6 **Direct heating:** The appliance is designed for direct room heating and must not be connected to a central heating system.

WARNING

- 1 Only use the wood stove to burn recommended fuels. Do not use the wood stove as an incinerator for waste or other unsuitable materials.
- 2 The appliance is designed to operate with the door closed. Burning with the door open is not permitted as this negatively affects combustion performance and can lead to an increased risk of smoke and fire hazard.

NOTE

- 2 Extractor fans can cause problems when operating in the same room or area as the appliance. For example, an extractor hood above a stove. The operation of an extractor fan can disturb the air pressure in the room and can lead to a reduced draught in the chimney or flue gas outlet of the appliance. This can result in incomplete combustion, smoke development and an increased risk of carbon monoxide poisoning. Make sure there is sufficient air supply in the room to prevent these problems.

1.2 Flue gas discharge

Connect the appliance to a suitable individual flue gas duct that is designed for wood-burning appliances. The appliance must not be connected to a shared discharge system. The flue gas duct must be clean and gas-tight. Angles in the flue gas duct must never exceed 45 degrees. A T-piece with soot bag pipe must be used at the rear connection. The diameter of the flue duct must be at least equal to the connection size of the appliance. The draft in the flue must be at least 12 Pa. A flue gas damper must be used in the event of a duct drawing too strongly. Ensure the chimney is cleaned regularly. Follow the instructions of the duct supplier here. In the event of a chimney fire, extinguish the fire in the appliance (e.g. with sand), close the chimney flap if possible, and contact the fire brigade.

1.3 Product standards and guidelines

The Woody Loft wood-burning appliance has been tested in accordance with NEN-EN 13240+A2 and also meets the following requirements:

- NEN-EN 16510-1
- NEN-EN 16510-2-1
- BimschV stufe 2
- DEFRA
- Eco Design

2 FUEL

2.1 What fuel can you use and what should you pay attention to?

Good fuel is the “engine” of your appliance. Always use high-quality, well-dried wood. This will ensure you get the most benefit from the fire and will prevent unwanted “side effects” such as excessive smoke formation or spattering. What can you use?

- 1 Hard woods such as oak, beech and wood from fruit trees. This wood gives a short flame and burns for a longer period.
- 2 Light woods such as birch, poplar, willow, alder and spruce. These types give a long flame but burn quite quickly.
- 3 Softwood (only in a very well-burning fire in order to avoid deposits in the chimney)
- 4 Dry spruce is often used as kindling because it burns quickly.

2.2 Loading fuel

Load the appliance with the fuel amount specified below. Place the load in a single layer on the floor of the combustion chamber.

NOTE

Do not exceed the amount of fuel specified here. Overloading can lead to excessive smoke formation.

Logs	
Quantity	2 units
Weight	Approximately 0.9 kg each
Length	Approximately 25 cm

The above quantity burns for approximately 45 minutes at a chimney draft pressure of 12 Pa, measured under standardised test conditions according to EN 16510.

WARNING

- 1 Wood-burning appliances get hot when in use. After installation of the appliance, the glass surface is considered to be an active zone. The surface of the glass can become very hot. Warning: Caution must be exercised; children and those in need of assistance must be kept away from burning appliances. Appliances shall not be placed on or against non-refractory materials such as curtains. Modification of the appliance is strictly forbidden. Never place the appliance against or in a non-fireproof wall. See Distance from flammable materials.
- 2 Never burn in foggy or windless weather, avoid creating a nuisance in your environment.
- 3 The use of unsuitable fuels will lead to excessive smoke, a blackened glass panel, flammable deposits and may damage the appliance. It is also bad for the environment.

2.3 Inappropriate fuels include

- 1 All fluids.
- 2 Painted wood.
- 3 Impregnated wood.
- 4 MDF, chipboard.
- 5 Any kind of combustible waste.
- 6 Printed (coloured) paper from magazines.
- 7 Paraffin impregnated pressed wooden blocks.
- 8 Wet or fresh wood.
- 9 Coal, anthracite and other bituminous fuels.
- 10 Brown coal, peat.
- 11 Plastics.
- 12 Azobé wood.

2.4 Dry wood burns best

Freshly chopped wood must dry for at least 2 years before use. Oven-dried wood must be allowed to dry for an extra six months. Dried logs must have a moisture content of 10-20%.

2.5 White smoke

Your appliance is working correctly if you can see colourless or white smoke coming out of your chimney flue. Light coloured smoke indicates good fuel with good combustion. Grey, blue or even black smoke is produced by incomplete combustion, and this can be caused by damp wood or a low temperature.

2.6 Combustion air

A wood-burning appliance consumes about 35 m³ of air per hour, although this is hardly noticeable in practice. Safe and complete combustion requires a continuous air supply that cannot be shut off. The optionally available outside air supply connection can be used for this purpose.

In some cases, however, smoke backdrafting may be caused by something other than inadequate ventilation. For example, some types of wood can generate excessive smoke, leading to inadequate discharge through the flue gas duct. There may also be an obstruction or some form of narrowing in the flue gas duct. If in doubt about the cause, you are advised to contact your dealer or installer.

2.7 Ash removal

After many hours of operation, ash builds up in the appliance. You can allow the ash to accumulate inside the appliance as long as it does not obstruct the primary air vents at the front and rear of the combustion chamber. As soon as these openings are at risk of being blocked, the ash should be removed. Use a metal scoop and bucket for this, as the ash may contain smouldering embers, even after several days. Ash from clean, dry wood is a natural residual product and can be used as a soil conditioner. Fully cooled ash may also be disposed of in the container for garden and kitchen waste.

3 SAFETY

NOTE

- 1 Please read this safety chapter carefully before beginning installation or maintenance.
- 2 Follow the general regulations and the precautions/safety instructions in these installation instructions.

3.1 Instructions

Install the appliance in accordance with applicable European, national, local and building (installation) regulations. The Building Decree, among other things, applies in the Netherlands.

3.2 Installation precautions/safety instructions

Follow the precautions/safety precautions below carefully:

- 1 Only install and maintain the fireplace if you are a qualified installer of wood-burning appliances.
- 2 Only place the fireplace in a room in which the use of the fireplace does not pose a danger to the structural construction and activity in the room.
- 3 Take any flammable chimney beams above the fireplace into account. Remove these or install sufficient non-combustible insulation material according to Eurofire class A1 EN 13501-1 in accordance with the building guidelines.
- 4 If you encounter other flammable materials, apply sufficient non-flammable insulation material according to Eurofire class A1 EN 13501-1 in accordance with the building guidelines.
- 5 When installing a free-standing appliance, consider the minimum required space from the appliance to a non-combustible wall. This distance is 50 mm.
- 6 Use stove pipe material that meets at least EN 1856-2 T600.
- 7 When installing the fireplace and/or stove pipes, take account of the minimum distance to flammable objects and materials (see page 8, paragraph 4.3 *Distance to flammable materials* 4 and page 15, chapter 12 *Nameplate*).
- 8 In case of a flammable floor, install a protective floor plate.
- 9 Do not cover or wrap a free-standing fireplace with an insulating blanket or any other material.
- 10 Connect the appliance to a suitable flue gas duct.
- 11 Have the flue gas duct inspected and cleaned in advance by a certified chimney sweeping company.
- 12 Do not modify the appliance yourself.
- 13 Use only genuine parts for replacement.
- 14 Ensure adequate ventilation in the installation area, and install an additional air supply opening as necessary.
- 15 Do not allow negative pressure to be created in the installation space. If applicable, connect the outside air connection and use it to obtain combustion air directly from outside the home.

3.3 Safety instructions for operation

Essential precautions:

- 1 Do not place flammable objects on the appliance.
- 2 Do not leave the appliance unattended while the fuel is burning.
- 3 Do not place flammable objects within 110 cm of the front of the appliance.
- 4 Do not place flammable objects within 60 cm of the side of the appliance.
- 5 If applicable, ensure the distance between the top of the log storage module and the logs stacked in the storage module is at least 10 cm. Make sure the stored logs do not touch the top of the log storage module.
- 6 Do not use mineral fuel (e.g. coal, anthracite).
- 7 Do not use liquid fuels.
- 8 Do not use the appliance with the door open. Smoke can escape from the appliance. Open the appliance door only for a short period of time in order to add fuel or to remove ash.
- 9 Supervise children if they have access to the appliance.
- 10 Ensure adequate ventilation in the room in which the appliance is installed.
- 11 Do not use the appliance if the glass panel is visibly damaged.
- 12 Do not use the appliance if the door seal is damaged.
- 13 Verify the appliance is installed correctly. See the Installation and Maintenance Manual.
- 14 Wear the glove and use the control hook or a lever when refilling the appliance.
- 15 Make sure your clothing does not come into contact with the appliance. Synthetic clothing in particular ignites quickly and burns violently.
- 16 Do not use the appliance in fog, mist or when there is no wind.
- 17 Do not make any adjustments on the appliance. Any modification will void the warranty.

Safety guidelines:

- 18 Have the appliance, chimney and external combustion air supply inspected and cleaned by a certified installer at least once a year. To prevent a chimney fire.
- 19 Do not use freshly chopped wood.
- 20 Do not use more wood per load than specified. See paragraph 2.2 for the recommended amount of fuel.
- 21 Do not burn waste in the appliance.
- 22 Do not prepare food in the appliance. This will cause damage to the appliance and the chimney.

Comment:

- 23 Do not use the appliance continuously. The appliance is intended for intermittent use.

WARNING

- 1 Flue gases from blocked smoke vents are dangerous. Make sure the smoke vents remain free of blockages. Have the flues swept regularly in accordance with the recommended instructions to ensure safe and efficient operation of the appliance and to remove deposits that may damage the appliance. It is also bad for the environment.
- 2 When using the appliance for the first time, ensure there is adequate ventilation in the room in which the appliance is installed.
- 3 Do not use the appliance in fog, mist or when there is no wind.

NOTE

The appliance has a heat-resistant coating. When you first use the appliance, the coating may produce an unpleasant but not harmful odour.

3.4 Environmental safety instructions

- 1 Dispose of packaging materials in an environmentally friendly manner.
- 2 Dispose of ceramic heat-resistant glass via regular waste. Do not dispose of the ceramic heat-resistant glass with normal glass.
- 3 Dispose of the appliance in accordance with the instructions of the authorities or the installer.
- 4 Follow local regulations.

4 INSTALLATION OF THE APPLIANCE

4.1 Converting the top connection to a rear connection of the flue gas duct

As standard, the appliance comes with a top connection, but this can be converted easily into a rear connection.

- 1 Remove the round back plate from the casing (break it out by moving it back and forth)
- 2 Very carefully remove the baffle plate in the appliance
APPENDIX 3 1.
- 3 Remove the efficiency plate at the top connection
APPENDIX 3 2.
- 4 Remove the cover plate from the opening on the back of the appliance from the inside of the appliance.
- 5 Remove the flue connector from the top of the appliance and place it on the connection opening at the back of the appliance. Make sure there is a good gas-tight seal.
- 6 Fit the efficiency plate at the location of the rear connection with the opening facing upwards.
- 7 Slide the efficiency plate downwards in the most open position; you can adjust the draft in the appliance as needed later by adjusting the plate. The latter also applies to a top connection.
- 8 Now fit the cover plate that was removed from the rear connection to the duct opening on top of the appliance, making sure there is a good gas-tight seal.
- 9 Carefully replace the baffle plate in the reverse order it was removed, and ensure that all the interior vermiculite panels are free of any tension.
- 10 Place the extra seal cover at the top of the recess in the casing.

4.2 Installing the appliance

- 1 Ensure the floor has sufficient weight bearing capacity for the appliance.
- 2 Make sure all the combustion air supply openings are clear.
- 3 See paragraph 4.3 *Distance to combustible materials* **1 2 3 4** for the minimum distance to combustible materials. The flue gas duct on the appliance must be insulated.
- 4 Make sure the right type of fire extinguishers are on hand in the event of an emergency.
- 5 Place the appliance in the correct position.
- 6 Connect the discharge duct gas-tight.
- 7 Connect the direct external air supply to the external air connection under the appliance using non-combustible discharge material with a diameter of minimal 100 mm.




APPENDIX 1 5 1 2 3

NOTE

If the appliance is connected with the optional outside air supply connection, the **Type B** designation on the identification plate must be replaced by **Type BE**. This change is necessary to correctly display the configuration of the device in accordance with applicable guidelines (see chapter *Identification plate*).



4.3 Distance from flammable materials

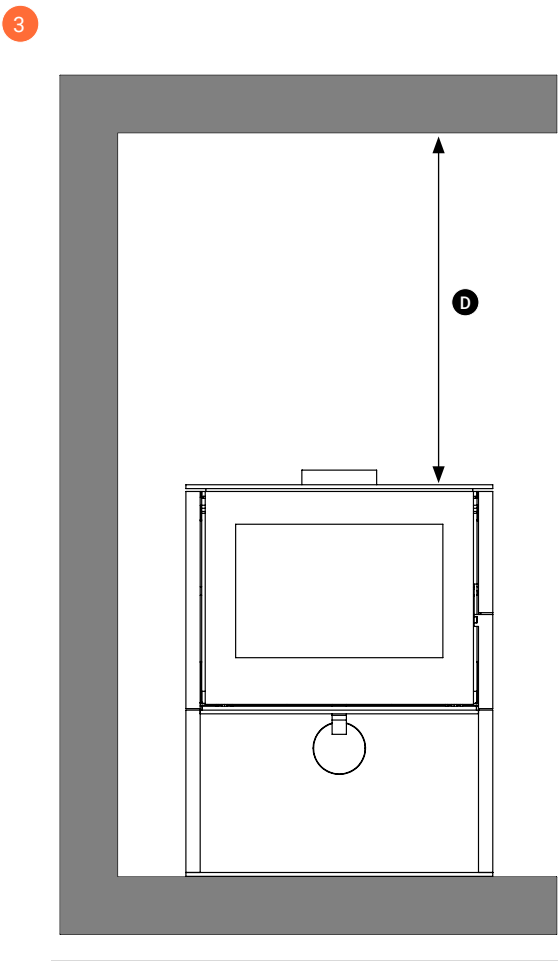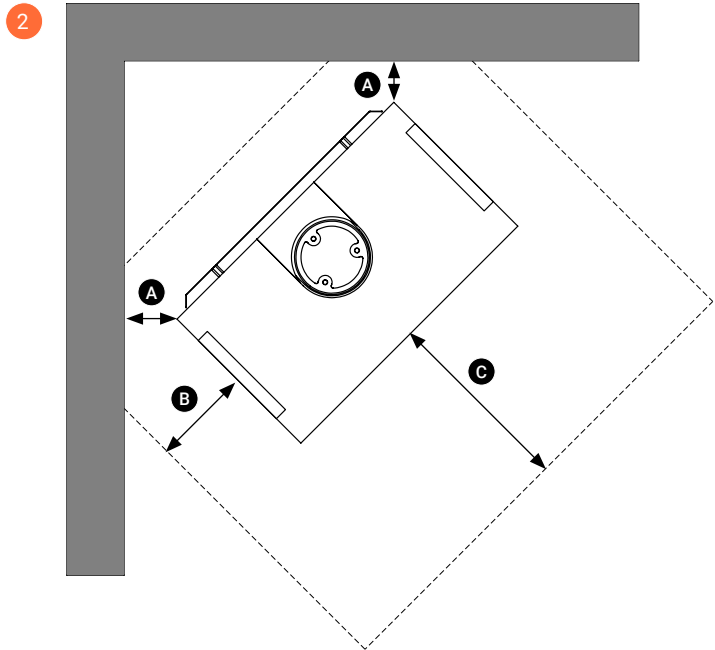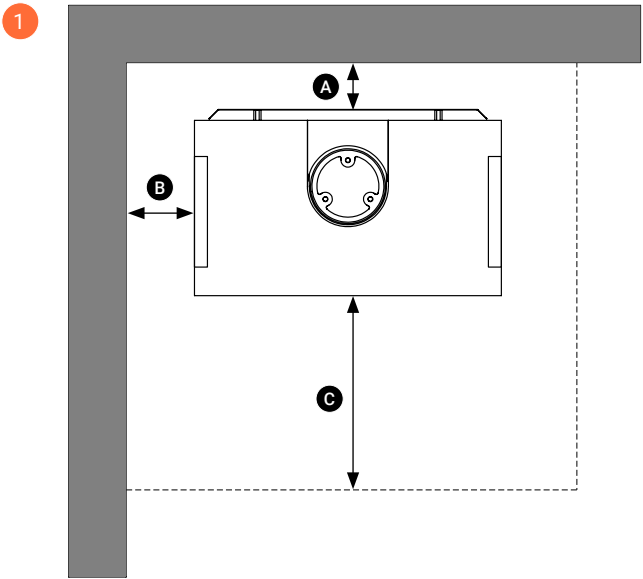

4

Distance from flammable materials (mm)	
A	100 *
B	600
C	1100
D	1000

*  The flue gas duct on the appliance must be insulated and CE-certified.



5 FLUE GAS DISCHARGE DUCTS

5.1 Instructions

The installation of a fireplace or stove and flue gas exhaust must be carried out in accordance with current European National and Local regulations. Follow the instructions as they are written down in these installation instructions.

5.2 Requirements for flue gas exhaust ducts

A metal chimney flue must meet the requirements of:

- 1 EN 1856-1 Chimneys
- 2 EN 1856-2 Metallic linings and connecting pipes

A chimney built on site must meet the requirements of:

- 1 EN 15287-1 Chimneys for open heating appliances
- 2 EN 15287-2 Chimneys for closed heating appliances

The operation of the chimney can be demonstrated according to EN 13384-2.

NOTE

Extractor fans can cause problems if they are operating in the same room or area as the appliance. One solution for this could be the use of an external combustion air supply.

The following specifications are applicable to the flue gas duct:

- 1 The flue gas duct must be inspected and swept in advance by a specialist at the beginning of each heating season.
- 2 The flue gas duct must be suitable for connecting a wood-fired appliance.
 - For the connection material (stove pipe) on the appliance, use a material that complies with at least EN 1856-2 T600 class.
 - When installing a stainless steel flexible pipe, always use the double-walled stainless steel version with a "smooth" interior.
- 3 The appliance must be connected to a single, undivided flue gas duct.
- 4 The flue gas duct must be clean.
- 5 The flue gas duct must be gas-tight.
- 6 The offset in the flue gas duct must not exceed 1.5 metres, with a minimum angle of 45 degrees from the horizontal plane.
- 7 For a rear connection to the appliance, the horizontal part of the flue gas duct must not exceed 500 mm. It must then go vertically upwards.
- 8 When connecting the rear connection of the appliance to a vertical flue gas duct, a T-piece with soot bag must be used.
- 9 The diameter of the flue gas duct must be at least equal to the diameter of the flue gas discharge of the appliance.
- 10 The draft of the flue gas duct must be at least 12 Pascal.
- 11 A flue gas damper must be fitted in the event of the draft being too strong.

If necessary, install a flue gas fan if there is insufficient draught or negative pressure is created in the installation space due to mechanical ventilation in the home; this can solve the negative pressure problem you may be experiencing.

- 12 Stove pipes must be installed with discharge towards the appliance.
- 13 To limit rust formation and damage to the interior lining of the appliance due to moisture, a rain cap/draft cap must be placed on top of the flue gas duct.
- 14 The flue gas duct must be self-supporting and must not rest on the appliance.

WARNING

For proper installation of the flue gas discharge, follow the installation instructions of the flue gas discharge manufacturer.

6 OPERATING INSTRUCTIONS


Light the appliance using the Swiss method. This method requires the appliance to be lit from top to bottom. This ensures complete, clean and responsible combustion with minimal emission of dust and smoke. Check and clean the flue gas duct thoroughly before using the wood burning appliance after a long period of it not being used. Remove any obstructions, such as bird nests, leaves, soot build-up, or other materials that may interfere with airflow and affect safe operation. Proceed as follows:

- 1 If a throttling valve is present in the flue, it must be fully opened before lighting the appliance.
- 2 Move the air control slider to the maximum open position, which is fully to the right. **1**
- 3 Stack the kindling crosswise at a small distance from each other, from thick to thin. Stack some kindling wood crosswise on top of this. Place the firelighter at the very top. **4 1**
- 4 Then light the firelighter so the fire burns from top to bottom **2**. The wood heats up slowly, which means it will burn longer and the fire will be more controlled. **3**
- 5 Close the door in the ajar position **APPENDIX 2 2**.
- 6 The fire will slowly draw down and ignite the large logs at the bottom of the pile.
- 7 The door can be fully closed **APPENDIX 2 1** and the control slide can be partially closed, for example at the middle position **2**

⚠ WARNING


- 1 Keep the appliance door closed at all times unless lighting the fire, adding fuel, or removing cold ashes. This prevents smoke leakage and ensures optimum combustion efficiency and safety.
- 2 The appliance can reach very high temperatures. Use the supplied cold handle to operate the air slides and open/close the door.

1

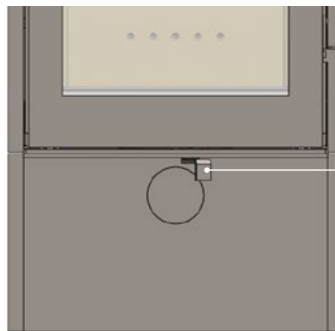


Control slider:
Maximum open

2

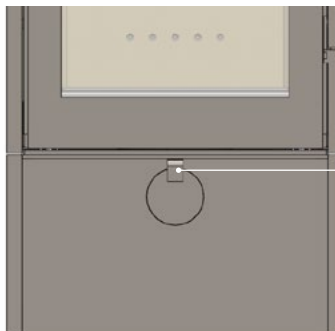

Control slider:
Middle position

3

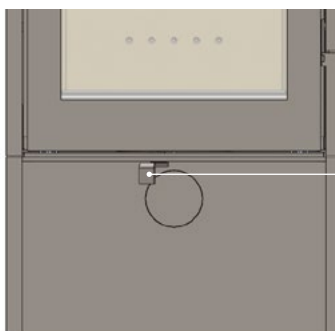

Control slider:
Closed/DEFRA position



Instructional video



- 8 Place 2 split logs lengthwise from front to back a few centimetres apart in your appliance. 2 blocks of 0.9 kg (1.8 kg of base filling), each 25 cm long.
- 9 Close the appliance door completely again. **APPENDIX 2 1**
- 10 The combustion speed can be regulated with the control slide under the door, moving it to the left results in a reduced air supply.
- 11 If the air control slide is in the middle **2** the appliance burns at its nominal combustion.
- 12 Fill the appliance regularly and as needed, but no more than the prescribed load, see technical data.
- 13 Never load with solid and/or liquid fuels other than dry wood.
- 14 If the ash bed becomes excessive over time (primary air openings in the front and back of the appliance are blocked), scoop out the ash.
- 15 If the draft in the appliance/chimney is too high, the draft in the appliance can be tempered by moving the efficiency plate **APPENDIX 3 2** closer. To do this, remove the baffle plate **APPENDIX 3 1** by lifting it slightly at the front **1**, tilting the plate **2** and first removing it from the appliance using the underside of the plate **2 3**. The efficiency plate can then be adjusted by loosening the nuts. **4 5**
- 16 If the draft is still too high when the efficiency plate is in the maximum closed position, a flue gas damper must be installed in the discharge pipe. If your appliance becomes overloaded and threatens to overheat as a result, the air supply must be closed completely. In this case, never open the door of your appliance (especially in the event of a chimney fire).

NOTE

- 1 Ensure a minimum gap of 100 mm remains below the control valve to ensure good air supply and to prevent disruption of air circulation.
- 2 Provide adequate ventilation to ensure efficient and clean combustion and to prevent smoke and harmful gases from entering the room.

WARNING

Treat the heat-resistant interior with care

There are vermiculite plates inside the appliance. These insulation plates ensure the temperature in the appliance remains high. The durability of the plates depends on how you stock the fire. Wet wood, for example, will cause the panel to become porous more quickly. The plate may then break if you hit it. If the plates crack after a number of uses, you can safely continue using the appliance as this has no adverse consequences for the combustion. However, if the plates swell and/or fall apart due to moisture ingress, the plates must be replaced. The plates are easy to replace. Please inform your dealer of the type of appliance and the dimensions if you want to buy a new plate.

7 MAINTENANCE

A well-maintained and clean appliance ensures optimal combustion, which will subsequently contribute to better heat output, a cleaner burning fire, reduced smoke and soot formation, and a longer lifespan of the appliance.

Cleaning

1 Paint

Clean your appliance with a soft, dry cloth. Do not use water, because the heat-resistant paint is not water-repellent. Also, do not place objects on the appliance.

2 Cleaning

Although the appliance has a glass panel aeration system, deposits may still form on the glass. These deposits can be removed with a suitable glass cleaner, which you can leave on the glass for a period to take effect if desired. Never clean the glass panel with an abrasive agent and/or abrasive sponge. These agents will scratch the paint.

3 Seals

The seals must be replaced when they become worn or damaged for optimum efficiency.

4 Side glass panels

To access the side glass panels, remove the side panels.
See **APPENDIX 4** Step by step guide

WARNING

The baffle and efficiency plate must be removed when cleaning the flue. This will prevent soot accumulation.
See **APPENDIX 3**.

NOTE

- 1 The Heat Reflective glass is placed on the combustion chamber side when installing the double glazing of the side glass panels, with the coating on the outside. The second, uncoated glass is then placed on the inside of the side panel. The door has double heat-resistant glass.
- 2 The heat-resistant glass or ceramic glass can withstand very high temperatures. The heat-resistant glass has a Heat Reflective coating. This metal coating reflects some of the infra-red rays back into the combustion chamber. This increases the temperature of the combustion chamber, increasing combustion quality. The higher temperature of the glass also ensures any soot particles that come into contact with the glass will burn off, meaning the glass will stay cleaner for a longer period. The Heat Reflective coating therefore has some form of partial self-cleaning.

8 TROUBLESHOOTING

Problem	Possible cause	Possible solution
The fire burns badly	Damp wood	Use wood with a moisture content of no more than 20%
	Incorrect fuel	Only use the fuel allowed for the appliance
	Insufficient draught in the chimney (min. 12 Pa), e.g. due to negative pressure in the room	Follow the recommended lighting procedure, ensure adequate ventilation air in the room, and turn off all air-intake devices
	insufficient combustion air	Slide the air lever all the way to the right
	Foggy weather	Do not burn in foggy conditions
The fire is burning too hot	The chimney is drawing too much	Consult your chimney sweep if the restrictor box needs to be closed
	The air lever is all the way to the right	Move the air lever more to the left
	More fuel than recommended	Stick to the basic filling instructions
Smoke comes into the room during refilling	Refilled too early, or filled onto wood that has not caught fire yet	Only add wood once a nice glowing bed has formed in the combustion chamber
	The appliance will not have reached the right temperature if you load too early	Burn firewood to a basic glow and only add small logs
	Air-intake devices, such as an extractor hood, are switched on	Make sure air intake devices are switched off. And make sure there is sufficient air in the room
	The door was opened too quickly	Open the door slowly and carefully
Glass gets dirty	Too damp wood	Use wood with moisture content up to 20%
	Too much wood	Do not add more than 2 to 3 pieces of wood
	The combustion chamber is not hot enough	Move the air slide all the way to the right. Use the recommended amount of fuel
	The seal around the door is damaged	Contact the dealer
Chimney fire (can be recognised by a roaring sound in the chimney)	Inflammation of soot and tar deposits in the chimney	Set the air slide to the far left position
		Call the emergency number (112)
		Extinguish the combustion chamber with sand
		WARNING: NEVER EXTINGUISH WITH WATER
		Ventilate the house
		Have the chimney swept at least once a year by a certified chimney sweep

9 GUARANTEE

You have a 2-year manufacturer's guarantee. The vermiculite plates and glass are not included. Any parts can be obtained through your dealer, please state the model and serial number. Your purchase receipt is your proof of guarantee. The guarantee period starts on the day of installation

9.1 The guarantee does not cover parts that are designed to wear

- 1 Door and glass seals
- 2 Ceramic glass
- 3 Vermiculite

9.2 The guarantee will expire in the following cases

- 1 Damage caused by excess heat
- 2 Damage caused by external influences
- 3 Use of unsuitable fuel types
- 4 Failure to comply with statutory or recommended installation regulations
- 5 Independent changes to the appliance
- 6 No service or maintenance performed on the appliance
- 7 Damage during transportation

10 TECHNICAL SPECIFICATIONS AND PARAMETERS WOODY LOFT 3SL

Art. Nr. 201040008002		Product: WOODY LOFT 3SL			DOP number		DOP-TLF201040008-01			
Parameter							Explanation parameter		Data	Unit
P _{nom}		the nominal heat output or a range of outputs (dependent on fuel types), rounded to the nearest one decimal place							8,2	kW
η _{nom}		the appliance efficiency at nominal heat output, rounded to the nearest integer							76,6	%
η _s		the appliance seasonal space heating efficiency at nominal heat output, rounded to the nearest integer							67,6	%
EEI		the energy efficiency index, rounded to the nearest integer							102,07	-
(*) CO _{nom} (13 % O ₂)		CO emission at 13 % oxygen content at nominal heat output, rounded to the nearest integer							926	mg/m ³
(*) NO _{xnom} (13 % O ₂)		NOx emission at 13 % oxygen content at nominal heat output, rounded to the nearest integer							108	mg/m ³
(*) OGC _{nom} (13 % O ₂)		hydrocarbon emission at 13 % oxygen content at nominal heat output, rounded to the nearest integer							49	mg/m ³
(*) PM _{nom} (13 % O ₂)		particulate matter emission at 13 % oxygen content at nominal heat output, rounded to the nearest integer							35	mg/m ³
p _{nom}		minimum flue draught at nominal heat output, rounded to the nearest integer							12	Pa
d _R		the minimum distances from the rear to combustible material, rounded to the nearest integer							100*	mm
d _S		the minimum distances from the sides to combustible material, rounded to the nearest integer							600	mm
d _C		the minimum distances from the top to combustible material in the ceiling, rounded to the nearest integer							1000	mm
d _P		the minimum distances from the front to combustible material, rounded to the nearest integer							1100	mm
d _F		the minimum distances from the front to combustible material in bottom front radiation area, rounded to the nearest integer							200	mm
d _L		the minimum distances from the front to combustible material in side front radiation area, rounded to the nearest integer							600	mm
d _B		the minimum distances below the bottom (not regarding feet) to combustible material, rounded to the nearest integer							na	mm
d _{non}		the minimum distances to non-combustible walls, rounded to the nearest integer							na	mm
s		Protective insulation according to manufacture r's instructions							na	mm
T _{snom}		the flue gas outlet temperature at nominal heat output, rounded to the nearest integer							316	°C
T _{class}		Chimney designation according to the appropriate chimney standard							T450/T600	-
φ _{f,g nom}		the flue gas mass flow at nominal heat output, rounded to the nearest one decimal place							6,9	g/s
CON or INT		whether the appliance is capable of continuous operation (CON), whether the appliance is capable of intermittent operation (INT)							INT	Operation
d _{out}		the diameter of the flue gas outlet, rounded to the nearest integer							150	mm
L, H, W		the overall dimensions of the appliance (length, height, width), rounded to the nearest integer							L=391 H=822 W=644	mm
m		Mass of the appliance, rounded to the nearest integer							159	kg
m _{chim}		the maximum load of a chimney the appliance may carry, to be rounded to the nearest integer							na	kg
		* meaning “read and follow the user operating instructions”								-
Manufacturer									Thermocet International B.V. Netherlands	
Type of appliances	Room-Sealed	Leakage declaration	Combustion air supply connection	Door closure	Tightness requirement					
Type B	-	No	No specific requirement	No specific requirement	No specific requirement					
	Fuel Wood									
	Conformité Européenne									
EN standard 1	Norm							EN 13240:2001 + A2:2004		
EN standard 2								EN 16510-1:2022		
EN standard 3								EN 16510-2-1:2022		
EN standard 4								Defra		
							certificate nr 1	EZKA/2025-02/00010-1		
							certificate nr 2	EZKA/2025-02/00010-2		
							notified body nummer	SGS: 1639		
							certification date	4-4-2025		
							production year	2025		
							Energy efficiency classificatio	A		
							System 3			

11 IDENTIFICATION PLATE WOODY LOFT 3SL

Product: WOODY LOFT 3SL			DOP-TLF201040008-01			CE																						
			 * meaning "read and follow the user operating instructions"			SGS: 1639		4-4-2025																				
<table><tr><td>P_{nom}</td><td>8,2</td><td>kW</td></tr><tr><td>η_{nom}</td><td>76,6</td><td>%</td></tr><tr><td>η_S</td><td>68</td><td>%</td></tr><tr><td>φ_{f,g nom}</td><td>6,9</td><td>g/s</td></tr><tr><td>p_{nom}</td><td>12</td><td>Pa</td></tr></table>			P _{nom}	8,2	kW	η _{nom}	76,6	%	η _S	68	%	φ _{f,g nom}	6,9	g/s	p _{nom}	12	Pa	<table><tr><td>Type of appliance</td><td>Type B</td></tr><tr><td>FUEL</td><td></td></tr></table>			Type of appliance	Type B	FUEL		EN standard 1		EN 13240:2001 + A2:2004	
P _{nom}	8,2	kW																										
η _{nom}	76,6	%																										
η _S	68	%																										
φ _{f,g nom}	6,9	g/s																										
p _{nom}	12	Pa																										
Type of appliance	Type B																											
FUEL																												
<table><tr><td>CO_{nom}(13 % O₂)</td><td>926</td><td rowspan="4">mg/m³</td></tr><tr><td>NO_{xnom}(13 % O₂)</td><td>108</td></tr><tr><td>OGC_{nom}(13 % O₂)</td><td>49</td></tr><tr><td>PM_{nom}(13 % O₂)</td><td>35</td></tr></table>			CO _{nom} (13 % O ₂)	926	mg/m ³	NO _{xnom} (13 % O ₂)	108	OGC _{nom} (13 % O ₂)	49	PM _{nom} (13 % O ₂)	35	EN 16510-1:2022																
CO _{nom} (13 % O ₂)	926	mg/m ³																										
NO _{xnom} (13 % O ₂)	108																											
OGC _{nom} (13 % O ₂)	49																											
PM _{nom} (13 % O ₂)	35																											
						EN 16510-2-1:2022																						
						-																						
						-																						
						Defra																						
<table><tr><td>m</td><td>159</td><td>kg</td></tr><tr><td>mchim</td><td>na</td><td>kg</td></tr></table>			m	159	kg	mchim	na	kg				certificate nr 2		EZKA/2025-02/00010-1														
m	159	kg																										
mchim	na	kg																										
<table><tr><td>L, H, W</td><td>L=391 H=822 W=644</td><td>mm</td></tr></table>			L, H, W	L=391 H=822 W=644	mm						EZKA/2025-02/00010-2																	
L, H, W	L=391 H=822 W=644	mm																										
<table><tr><td>dout</td><td>150</td><td>mm</td></tr></table>			dout	150	mm																							
dout	150	mm																										
Manufacturer			Thermocet International B.V. Netherlands			2025																						
								Serialnumber:																				
								2																				

12 TECHNICAL SPECIFICATIONS AND PARAMETERS WOODY LOFT 3SLH

Art. Nr. 201040008002		Product: WOODY LOFT 3SLH		DOP number DOP-TLF201040008-03	
Parameter		Explanation parameter		Data	Unit
P_{nom}		the nominal heat output or a range of outputs (dependent on fuel types), rounded to the nearest one decimal place		8,2	kW
η_{nom}		the appliance efficiency at nominal heat output, rounded to the nearest integer		76,6	%
η_s		the appliance seasonal space heating efficiency at nominal heat output, rounded to the nearest integer		67,6	%
EEI		the energy efficiency index, rounded to the nearest integer		102,07	-
(*) $CO_{nom}(13\% O_2)$		CO emission at 13 % oxygen content at nominal heat output, rounded to the nearest integer		926	mg/m ³
(*) $NO_{xnom}(13\% O_2)$		NOx emission at 13 % oxygen content at nominal heat output, rounded to the nearest integer		108	mg/m ³
(*) $OGC_{nom}(13\% O_2)$		hydrocarbon emission at 13 % oxygen content at nominal heat output, rounded to the nearest integer		49	mg/m ³
(*) $PM_{nom}(13\% O_2)$		particulate matter emission at 13 % oxygen content at nominal heat output, rounded to the nearest integer		35	mg/m ³
p_{nom}		minimum flue draught at nominal heat output, rounded to the nearest integer		12	Pa
d_R		the minimum distances from the rear to combustible material, rounded to the nearest integer		100*	mm
d_S		the minimum distances from the sides to combustible material, rounded to the nearest integer		600	mm
d_C		the minimum distances from the top to combustible material in the ceiling, rounded to the nearest integer		1000	mm
d_P		the minimum distances from the front to combustible material, rounded to the nearest integer		1100	mm
d_F		the minimum distances from the front to combustible material in bottom front radiation area, rounded to the nearest integer		200	mm
d_L		the minimum distances from the front to combustible material in side front radiation area, rounded to the nearest integer		600	mm
d_B		the minimum distances below the bottom (not regarding feet) to combustible material, rounded to the nearest integer		na	mm
d_{non}		the minimum distances to non-combustible walls, rounded to the nearest integer		na	mm
S		Protective insulation according to manufacture r's instructions		na	mm
T_{snom}		the flue gas outlet temperature at nominal heat output, rounded to the nearest integer		316	°C
T_{class}		Chimney designation according to the appropriate chimney standard		T450/T600	-
$\phi_{f,g nom}$		the flue gas mass flow at nominal heat output, rounded to the nearest one decimal place		6,9	g/s
CON or INT		whether the appliance is capable of continuous operation (CON), whether the appliance is capable of intermittent operation (INT)		INT	Operation
d_{out}		the diameter of the flue gas outlet, rounded to the nearest integer		150	mm
L, H, W		the overall dimensions of the appliance (length, height, width), rounded to the nearest integer		L=391 H=924 W=644	mm
m		Mass of the appliance, rounded to the nearest integer		159	kg
m_{chim}		the maximum load of a chimney the appliance may carry, to be rounded to the nearest integer		na	kg
		* meaning "read and follow the user operating instructions"			-
Manufacturer				Thermocet International B.V. Netherlands	
Type of appliances	Room-Sealed	Leakage declaration	Combustion air supply connection	Door closure	Tightness requirement
Type B	-	No	No specific requirement	No specific requirement	No specific requirement
	Fuel Wood				
	Conformité Européenne				
EN standard 1	Norm				EN 13240:2001 + A2:2004
EN standard 2					EN 16510-1:2022
EN standard 3					EN 16510-2-1:2022
EN standard 4					Defra
		certificate nr 1		EZKA/2025-02/00010-1	
		certificate nr 2		EZKA/2025-02/00010-2	
		notified body number		SGS: 1639	
		certification date		4-4-2025	
		production year		2025	
		Energy efficiency classificatio		A	
				System 3	

13 IDENTIFICATION PLATE WOODY LOFT 3SLH

Product: WOODY LOFT 3SLH			DOP-TLF201040008-03			CE																																									
<table><tr><td>Pnom</td><td>8,2</td><td>kW</td></tr><tr><td>ηnom</td><td>76,6</td><td>%</td></tr><tr><td>ηS</td><td>68</td><td>%</td></tr><tr><td>φf,g nom</td><td>6,9</td><td>g/s</td></tr><tr><td>pnom</td><td>12</td><td>Pa</td></tr></table>			Pnom	8,2	kW	ηnom	76,6	%	ηS	68	%	φf,g nom	6,9	g/s	pnom	12	Pa	Type of appliance Type B		 * meaning "read and follow the user operating instructions"																											
Pnom	8,2	kW																																													
ηnom	76,6	%																																													
ηS	68	%																																													
φf,g nom	6,9	g/s																																													
pnom	12	Pa																																													
<table><tr><td>FUEL</td><td></td></tr></table>			FUEL																																												
FUEL																																															
<table><tr><td>COnom(13 % O2)</td><td>926</td><td rowspan="4">mg/m3</td></tr><tr><td>NOxnom(13 % O2)</td><td>108</td></tr><tr><td>OGCnom(13 % O2)</td><td>49</td></tr><tr><td>PMnom(13 % O2)</td><td>35</td></tr></table>			COnom(13 % O2)	926	mg/m3	NOxnom(13 % O2)	108	OGCnom(13 % O2)	49	PMnom(13 % O2)	35	<table><tr><td>Operation</td><td>INT</td></tr><tr><td>EEI</td><td>102</td></tr></table>		Operation	INT	EEI	102																														
COnom(13 % O2)	926	mg/m3																																													
NOxnom(13 % O2)	108																																														
OGCnom(13 % O2)	49																																														
PMnom(13 % O2)	35																																														
Operation	INT																																														
EEI	102																																														
<table><tr><td>m</td><td>170</td><td>kg</td></tr><tr><td>mchim</td><td>na</td><td>kg</td></tr><tr><td>L, H, W</td><td>L=391 H=924 W=644</td><td>mm</td></tr><tr><td>dout</td><td>150</td><td>mm</td></tr></table>			m	170	kg	mchim	na	kg	L, H, W	L=391 H=924 W=644	mm	dout	150	mm			<table><tr><td>Tsnom</td><td>316</td><td>°C</td></tr><tr><td>Tclass</td><td>T450/T600</td><td>-</td></tr><tr><td colspan="3">the minimum distances from the rear to combustible material, rounded to the nearest integer</td></tr><tr><td>dR</td><td>100*</td><td rowspan="8">mm</td></tr><tr><td>dS</td><td>600</td></tr><tr><td>dC</td><td>1000</td></tr><tr><td>dp</td><td>1100</td></tr><tr><td>dF</td><td>200</td></tr><tr><td>dL</td><td>600</td></tr><tr><td>dB</td><td>na</td></tr><tr><td>dnon</td><td>na</td></tr><tr><td>s</td><td>na</td><td></td></tr></table>		Tsnom	316	°C	Tclass	T450/T600	-	the minimum distances from the rear to combustible material, rounded to the nearest integer			dR	100*	mm	dS	600	dC	1000	dp	1100	dF	200	dL	600	dB	na	dnon	na	s	na	
m	170	kg																																													
mchim	na	kg																																													
L, H, W	L=391 H=924 W=644	mm																																													
dout	150	mm																																													
Tsnom	316	°C																																													
Tclass	T450/T600	-																																													
the minimum distances from the rear to combustible material, rounded to the nearest integer																																															
dR	100*	mm																																													
dS	600																																														
dC	1000																																														
dp	1100																																														
dF	200																																														
dL	600																																														
dB	na																																														
dnon	na																																														
s	na																																														
Manufacturer Thermocet International B.V. Netherlands			2025			<table><tr><td>SGS: 1639</td><td>4-4-2025</td></tr></table>		SGS: 1639	4-4-2025																																						
SGS: 1639	4-4-2025																																														
					<table><tr><td>EN standard 1</td><td>EN 13240:2001 + A2:2004</td></tr><tr><td></td><td>EN 16510-1:2022</td></tr><tr><td></td><td>EN 16510-2-1:2022</td></tr><tr><td></td><td>-</td></tr><tr><td></td><td>-</td></tr><tr><td>Defra</td><td></td></tr><tr><td>certificate nr 2</td><td>EZKA/2025-02/00010-1 EZKA/2025-02/00010-2</td></tr></table>		EN standard 1	EN 13240:2001 + A2:2004		EN 16510-1:2022		EN 16510-2-1:2022		-		-	Defra		certificate nr 2	EZKA/2025-02/00010-1 EZKA/2025-02/00010-2																											
EN standard 1	EN 13240:2001 + A2:2004																																														
	EN 16510-1:2022																																														
	EN 16510-2-1:2022																																														
	-																																														
	-																																														
Defra																																															
certificate nr 2	EZKA/2025-02/00010-1 EZKA/2025-02/00010-2																																														
					<table><tr><td>Serialnumber:</td><td></td></tr><tr><td>1</td><td></td></tr></table>		Serialnumber:		1																																						
Serialnumber:																																															
1																																															

14 INFORMATION ABOUT DISPOSING OF THE APPLIANCE

- 1 Dispose of a discarded or obsolete appliance according to the instructions of the government authorities or the installer.
- 2 The information in this paragraph is informative. Always follow national and local regulations for recycling and disposing of the appliance or parts of the appliance.
- 3 Before disassembling and disposing of the appliance, remove the ashes and unburned fuel from the appliance. Dispose of the ash as general waste. Do not dispose of ash as organic waste.


Appliance parts	Material	Recycling/disposal
Combustion chamber interior (see Appendix 5)	Vermiculite	Vermiculite that has been in contact with combustion gases cannot be reused or recycled. Dispose of as general waste
Combustion chamber	Steel	Discard as metal waste
Glass panel	Ceramic glass	Dispose of as general waste or ceramic waste. Do not dispose of as glass waste
Main part of the appliance	Steel	Discard as metal waste
Side walls and door	Steel	Discard as metal waste

14.1 Reuse


The appliance is packed in packaging material that can be reused. This must be disposed of in accordance with local and national regulations regarding waste disposal. The glass cannot be reused. Dispose of the glass as general waste or ceramic waste. Refractory glass has a higher melting temperature and therefore cannot be recycled. By ensuring refractory glass does not end up with recyclable glass, you make an important contribution to the environment.



Appendix 1 DIMENSIONAL DRAWINGS

Woody Loft 3SL
Dimensions in mm

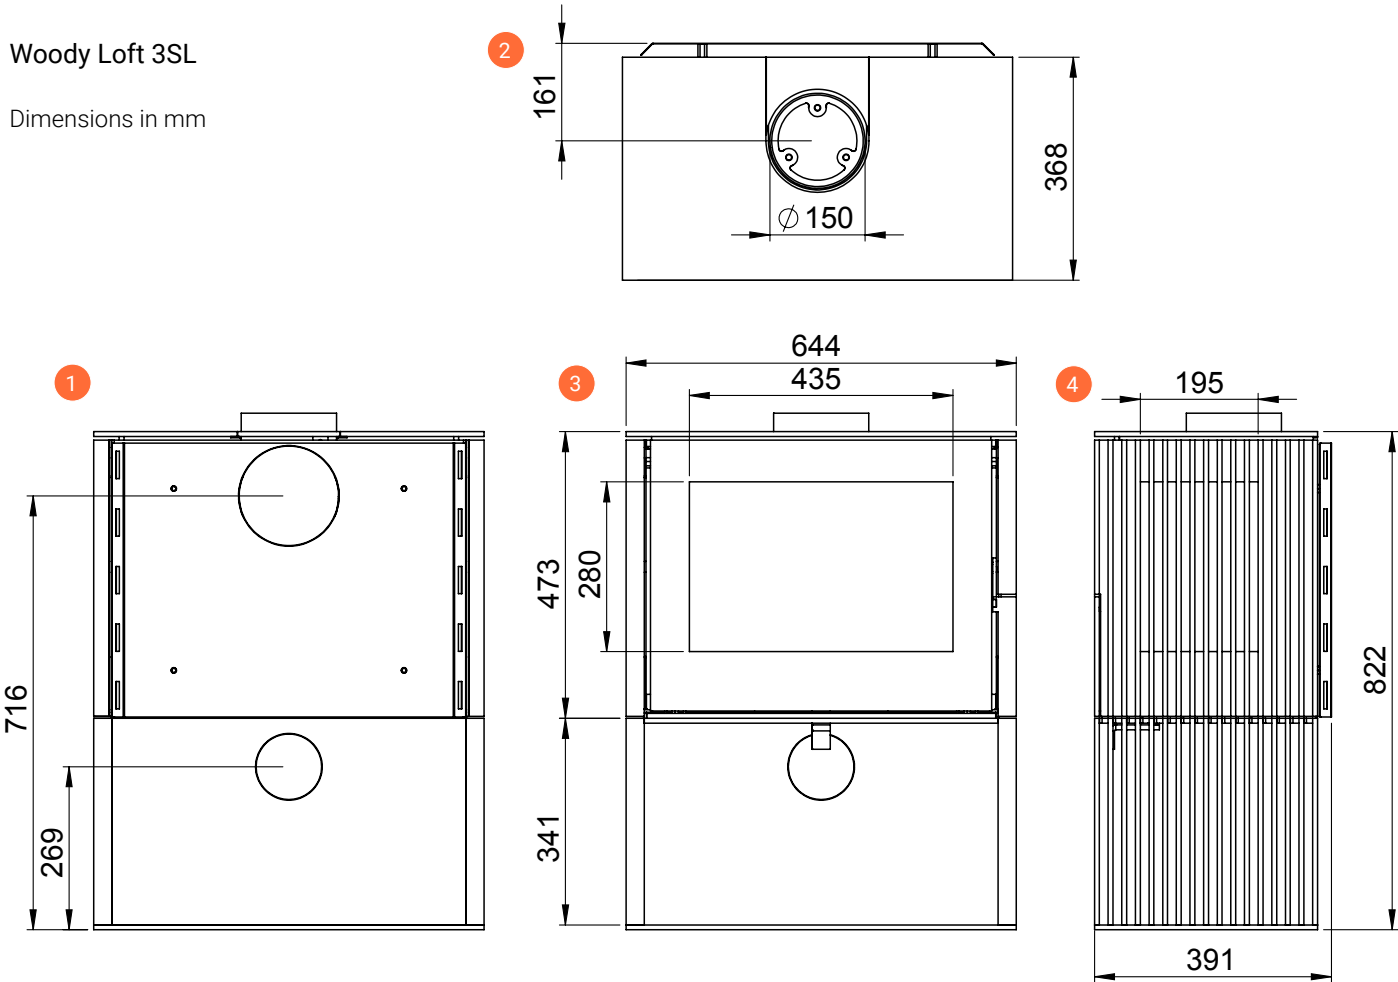



Woody Loft 3SLH
Dimensions in mm


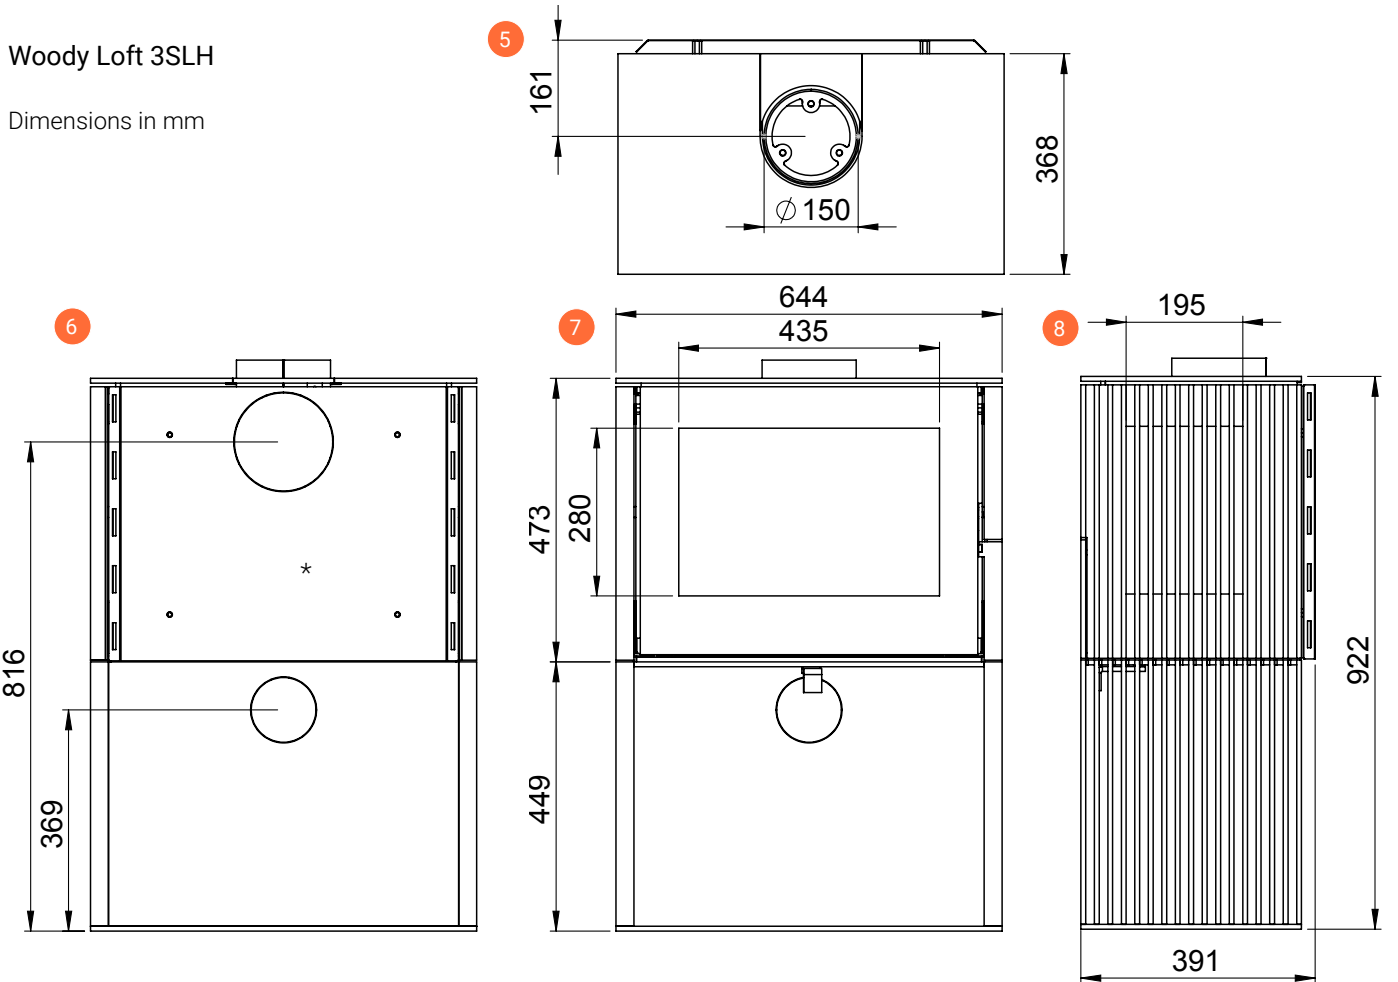


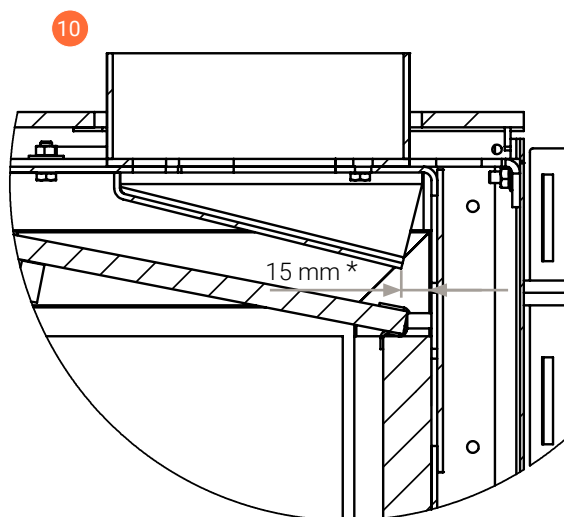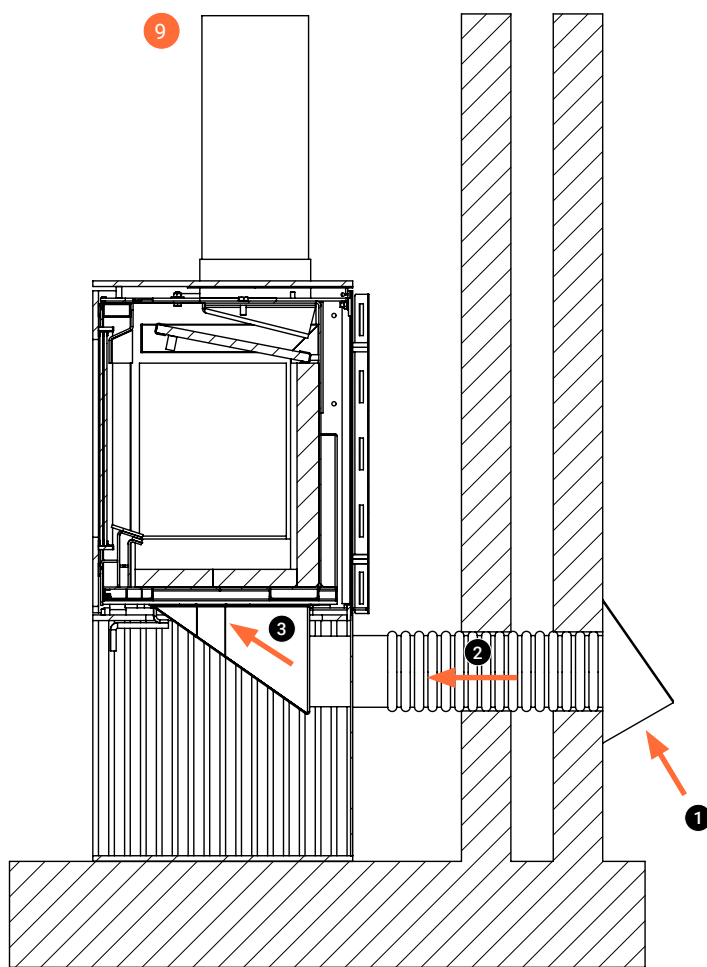


* CE approval position




Appendix 2 DOOR CLOSED AND AJAR

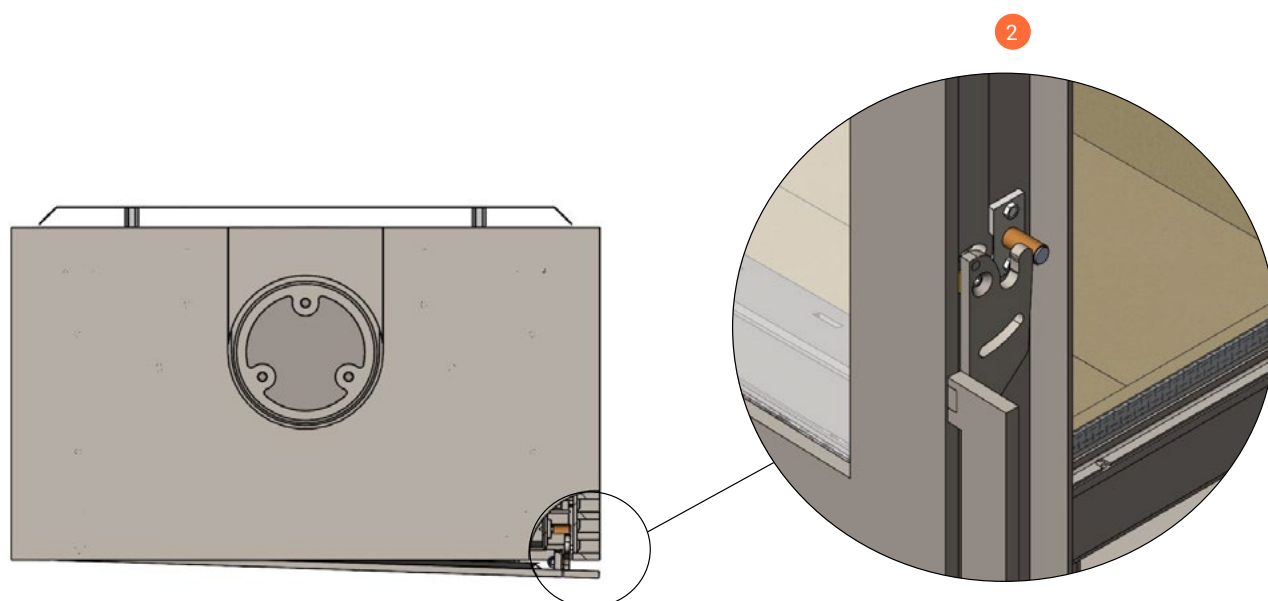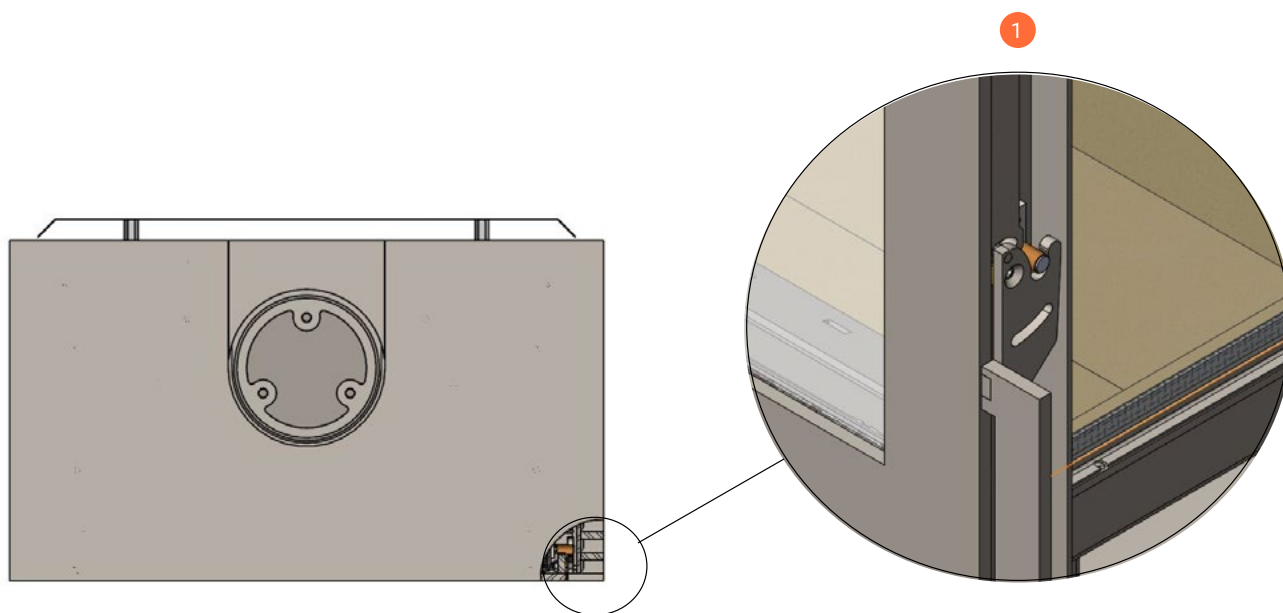

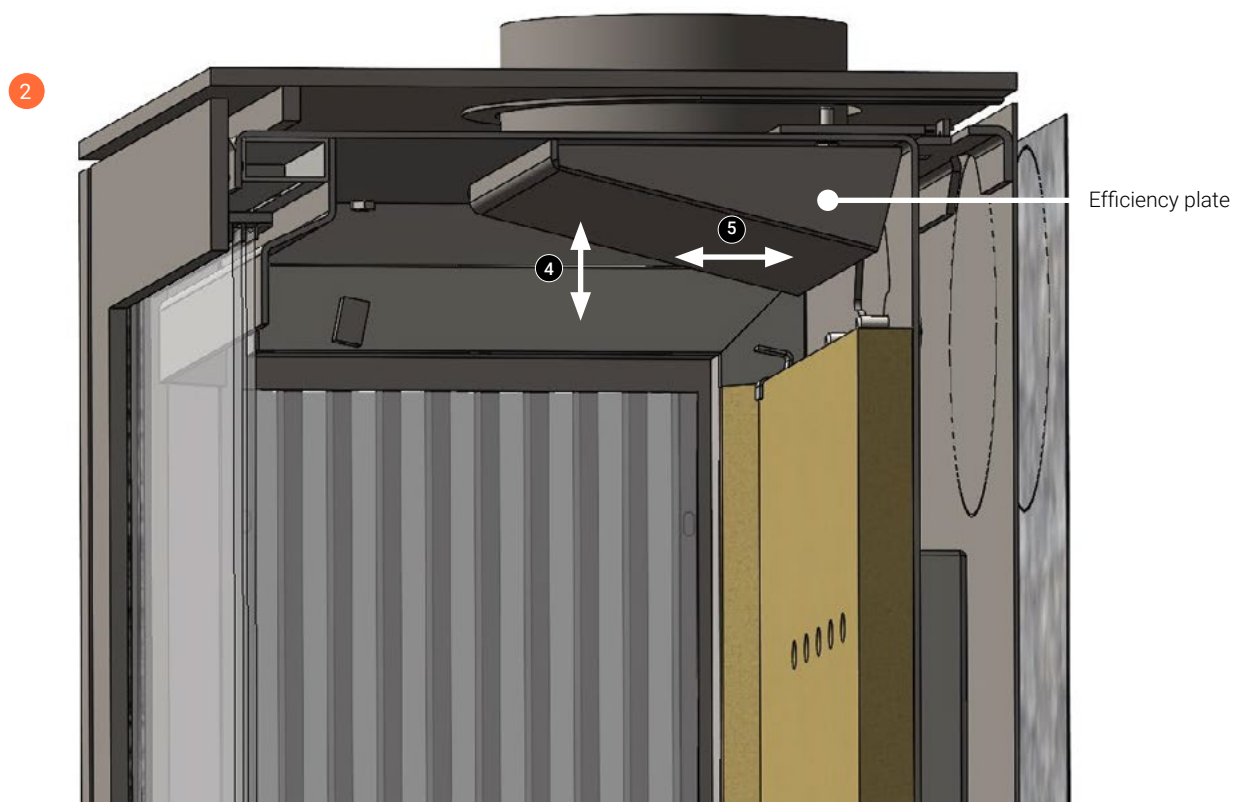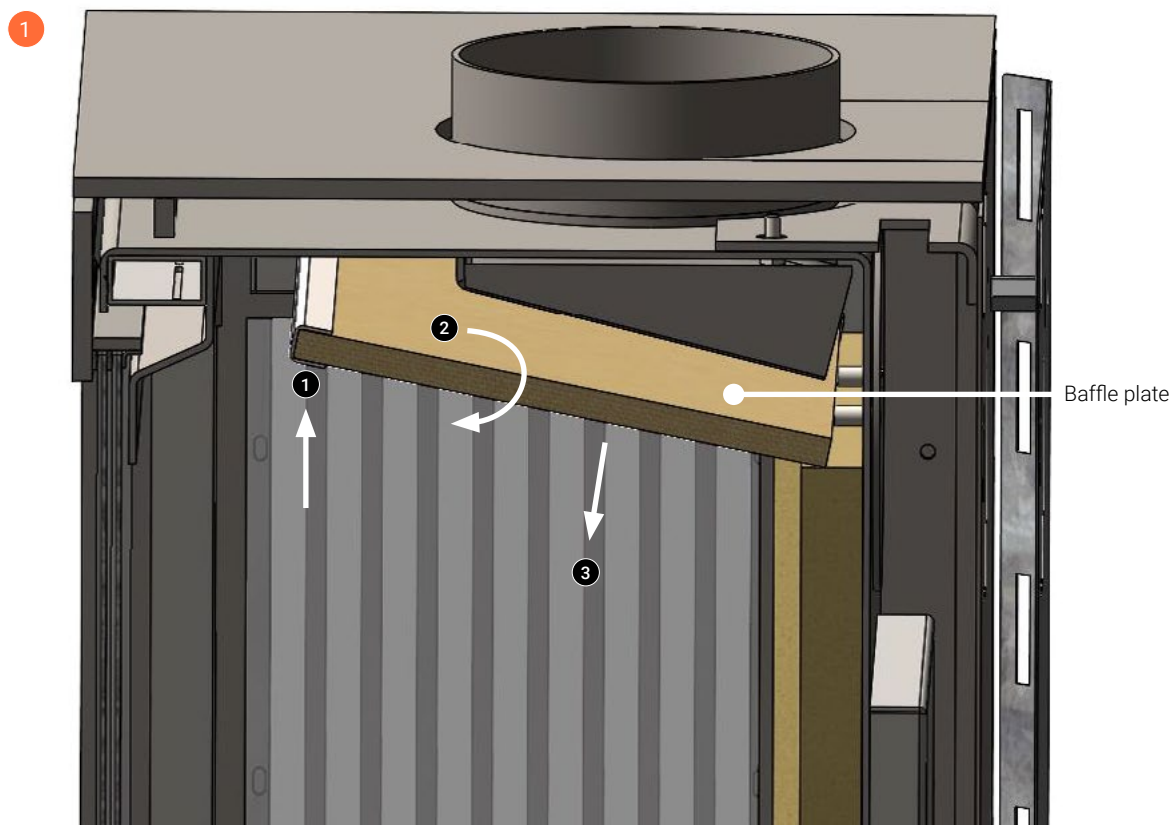

Appendix 4 REMOVING SIDE PANELS

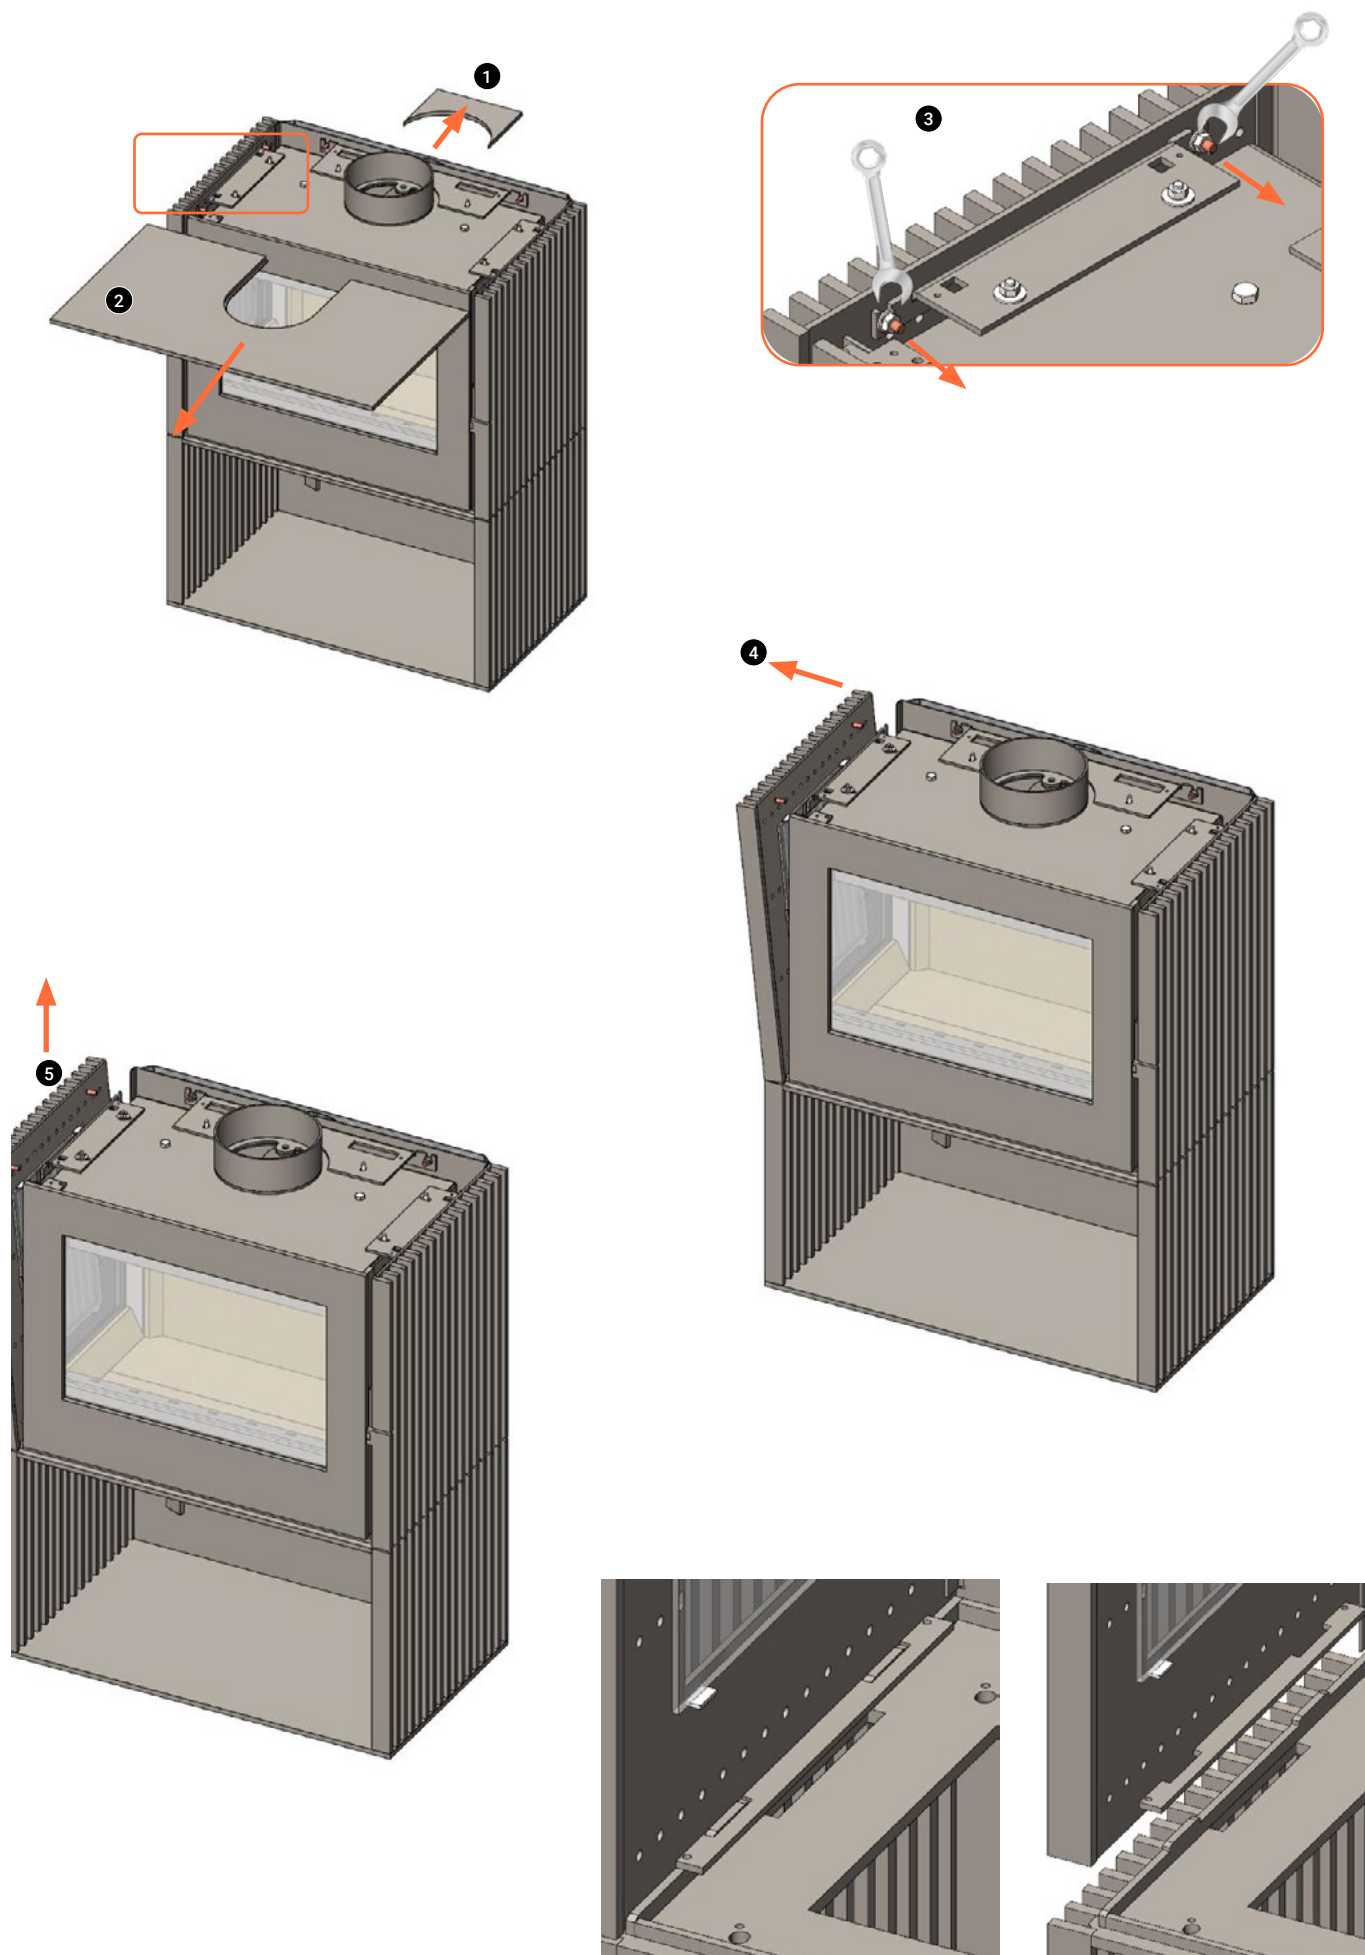

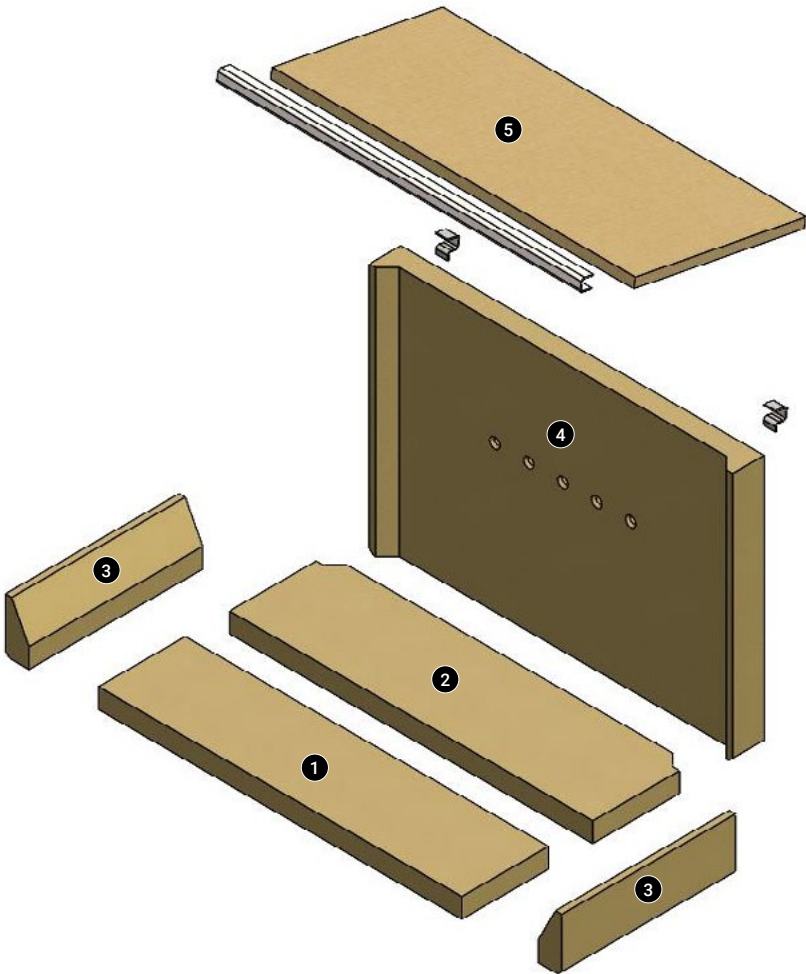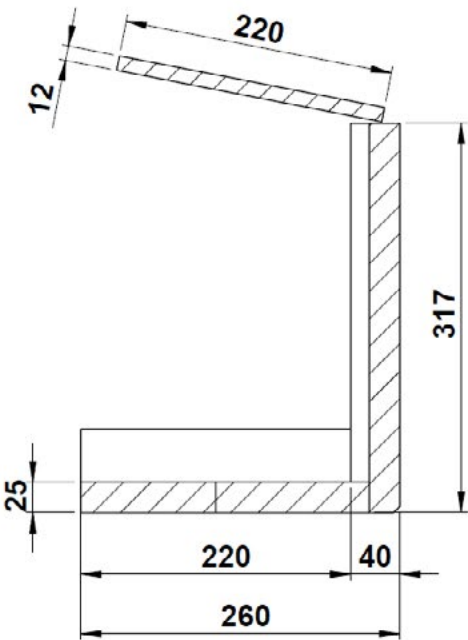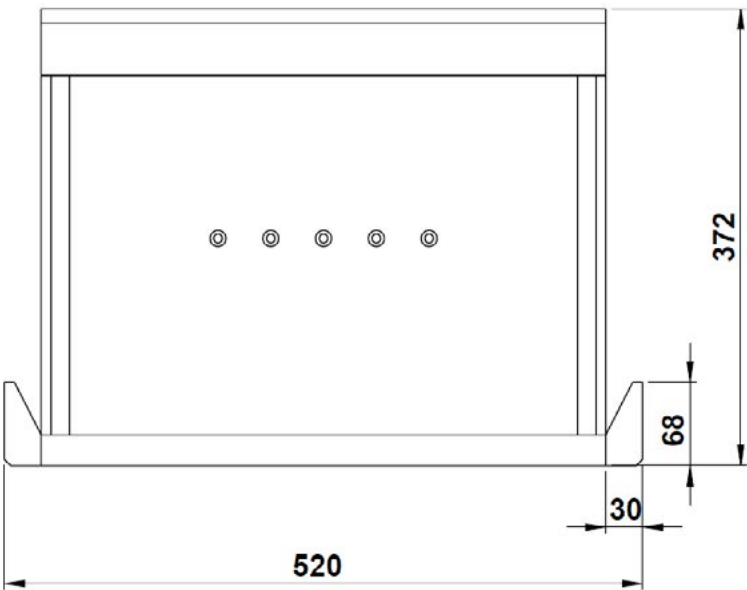

Number	Description
1	Front base plate
2	Rear base plate
3	Side panel
4	Rear panel
5	Baffle plate

Appendix 6 INSTALLATION INFORMATION, SERVICE AND MAINTENANCE LOGBOOK

Installation information		
Name		
Address		
Appliance serial number		
Date of purchase		
Comments		

Service and maintenance logbook		
Service date	Performed by	Work activities performed

Appendix 7 DECLARATION OF PERFORMANCE WOODY LOFT 3SL

Declaration of performance

According to Regulation (EU) 305/2011

Unique identification code of the product-type:	WOODY LOFT 3SL	 DOP-TLF201040008-01
Intended use of the construction product, in accordance with the harmonized technical specification	Solid fuel-fired space heating without hot water supply	
Contact address of the manufacturer	thermoCet International B.V. Laagerfseweg 27 3931 PC Woudenberg Nederland	
The system(s) for the assessment and verification of the constancy of performance of the construction product listed in Annex V of Regulation (EU) 305/2011	System 3	
Reference number and date of issue of the harmonized standard	SGS: 1639	4-4-2025
Notified body assessment document	EZKA/2025-02/00010-1	
	EZKA/2025-02/00010-2	
Harmonized standard	EN 13240:2001 + A2:2004	-
	Defra EN 16510-1:2022	EN 16510-2-1:2022

Declared performance

Product: Roomheaters for solid fuel Intended use: Space heating in residential buildings			
Essential characteristics	Clauses of this European Standard related to essential characteristics	Classes and/or threshold levels	Notes

Mechanical resistance and stability

Load bearing capacity	4.1	mchim	na	Given in kg
-----------------------	-----	-------	----	-------------

Safety in case of fire

Protection of combustible materials	4.2	dB	na	Minimum distance to combustible materials – bottom (dB) in mm
	4.2	dF	200	Minimum distance to combustible materials – floor in front (dF) in mm
		dC	1000	Minimum distance to combustible materials – ceiling (dC) in mm
		dR	100*	Minimum distance to combustible materials – rear (dR) in mm * see manual chapter 3
		dS	600	Minimum distance to combustible materials – side (dS) in mm
		dL	600	Minimum distance to combustible materials – side radiation area (dL) in mm
		dp	1100	Minimum distance to adjacent combustible materials (e.g. furniture) dP in mm
		s	na	Material type and thickness of protective insulation material (s) in mm (if any)

Hygiene, health and the environment

At nominal heat output:				
Carbon monoxide emission(CO)	4.3	CO _{nom} (13 % O ₂)	926	mg/m ³
Nitrogen oxides (NO _x) emissions	4.4	NO _{xnom} (13 % O ₂)	108	mg/m ³
Emission of organic gaseouscarbon (OGC)	4.5	OGC _{nom} (13 % O ₂)	49	mg/m ³
Particulate matter emissions(PM)	4.6	PM _{nom} (13 % O ₂)	35	mg/m ³

Safety and accessibility in use

Data for installation to a chimney at nominal heat output:				
Flue gas outlet temperature	4.7.2	T _{snom}	316	°C
Minimum flue draught	4.7.4	p _{nom}	12	Pa
Flue gas mass flow	4.7.6	φ _{f,g nom}	6,9	g/s
Data for installation to a chimney regarding fire safety on safety test heat output:				
Fire safety of installation to the chimney	4.7.8	T _{class}	T450/T600	
Appliance's thermal output and energy efficiency at nominal heat output:				
Space heat output	4.8.1	P _{nom}	8,2	kW
Efficiency	4.8.3	η _{nom}	76,6	%
Space heating efficiency				
Seasonal space heatingefficiency at appliance'snominal heat output	4.8.7	η _S	67,6	%
Energy efficiency	4.8.8	EEI	102,07	Energy efficiency index
Energy efficiency classification determined according to 4.8.8, Table 7		Energy Class	A	Energy efficiency class
Sustainable use of natural resources				
Environmental sustainability	4.9		☒	Environmental sustainability elements to be declared according to 4.9
Articles 36 to 38 of Regulation (EU) No 305/2011.			☒	

The performance of the above product is in conformity with the declaration. For the issuance of the declaration of performance in accordance with Regulation (EU) No 305/2011, only the manufacturer mentioned above is responsible.

Signed on behalf of the manufacturer by:

Tjarco Jilesen, CEO
March 2024



Appendix 8 DECLARATION OF PERFORMANCE WOODY LOFT 3SLH

Declaration of performance

According to Regulation (EU) 305/2011

Unique identification code of the product-type:	WOODY LOFT 3SLH	 DOP-TLF201040008-02
Intended use of the construction product, in accordance with the harmonized technical specification	Solid fuel-fired space heating without hot water supply	
Contact address of the manufacturer	thermoCet International B.V. Laagerfseweg 27 3931 PC Woudenberg Nederland	
The system(s) for the assessment and verification of the constancy of performance of the construction product listed in Annex V of Regulation (EU) 305/2011	System 3	
Reference number and date of issue of the harmonized standard	SGS: 1639	4-4-2025
Notified body assessment document	EZKA/2025-02/00010-1	
	EZKA/2025-02/00010-2	
Harmonized standard	EN 13240:2001 + A2:2004	-
	Defra EN 16510-1:2022	EN 16510-2-1:2022

Declared performance

Product: Roomheaters for solid fuel Intended use: Space heating in residential buildings			
Essential characteristics	Clauses of this European Standard related to essential characteristics	Classes and/or threshold levels	Notes

Mechanical resistance and stability

Load bearing capacity	4.1	mchim	na	Given in kg
-----------------------	-----	-------	----	-------------

Safety in case of fire

Protection of combustible materials	4.2	dB	na	Minimum distance to combustible materials – bottom (dB) in mm
	4.2	dF	200	Minimum distance to combustible materials – floor in front (dF) in mm
		dC	1000	Minimum distance to combustible materials – ceiling (dC) in mm
		dR	100*	Minimum distance to combustible materials – rear (dR) in mm * see manual chapter 3
		dS	600	Minimum distance to combustible materials – side (dS) in mm
		dL	600	Minimum distance to combustible materials – side radiation area (dL) in mm
		dp	1100	Minimum distance to adjacent combustible materials (e.g. furniture) dP in mm
		s	na	Material type and thickness of protective insulation material (s) in mm (if any)

Hygiene, health and the environment

At nominal heat output:				
Carbon monoxide emission(CO)	4.3	CO _{nom} (13 % O ₂)	926	mg/m ³
Nitrogen oxides (NO _x) emissions	4.4	NO _{xnom} (13 % O ₂)	108	mg/m ³
Emission of organic gaseous carbon (OGC)	4.5	OGC _{nom} (13 % O ₂)	49	mg/m ³
Particulate matter emissions(PM)	4.6	PM _{nom} (13 % O ₂)	35	mg/m ³

Safety and accessibility in use


Data for installation to a chimney at nominal heat output:				
Flue gas outlet temperature	4.7.2	T _{snom}	316	°C
Minimum flue draught	4.7.4	p _{nom}	12	Pa
Flue gas mass flow	4.7.6	φ _{f,g nom}	6,9	g/s
Data for installation to a chimney regarding fire safety on safety test heat output:				
Fire safety of installation to the chimney	4.7.8	T _{class}	T450/T600	
Appliance's thermal output and energy efficiency at nominal heat output:				
Space heat output	4.8.1	P _{nom}	8,2	kW
Efficiency	4.8.3	η _{nom}	76,6	%
Space heating efficiency				
Seasonal space heating efficiency at appliance's nominal heat output	4.8.7	η _S	67,6	%
Energy efficiency	4.8.8	EEI	102,07	Energy efficiency index
Energy efficiency classification determined according to 4.8.8, Table 7		Energy Class	A	Energy efficiency class
Sustainable use of natural resources				
Environmental sustainability	4.9		☒	Environmental sustainability elements to be declared according to 4.9
Articles 36 to 38 of Regulation (EU) No 305/2011.			☒	

The performance of the above product is in conformity with the declaration. For the issuance of the declaration of performance in accordance with Regulation (EU) No 305/2011, only the manufacturer mentioned above is responsible.


Signed on behalf of the manufacturer by:
Tjarco Jilesen, CEO
March 2024



Woody Loft 3SL

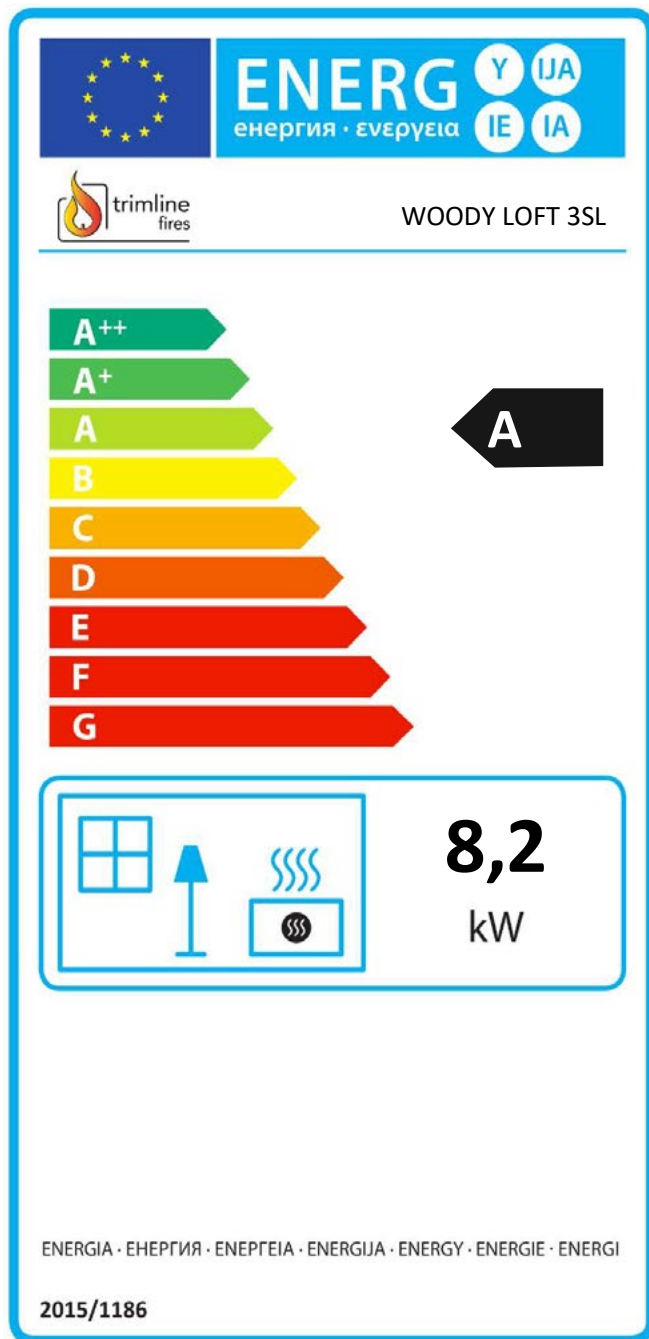

Woody Loft 3SLH

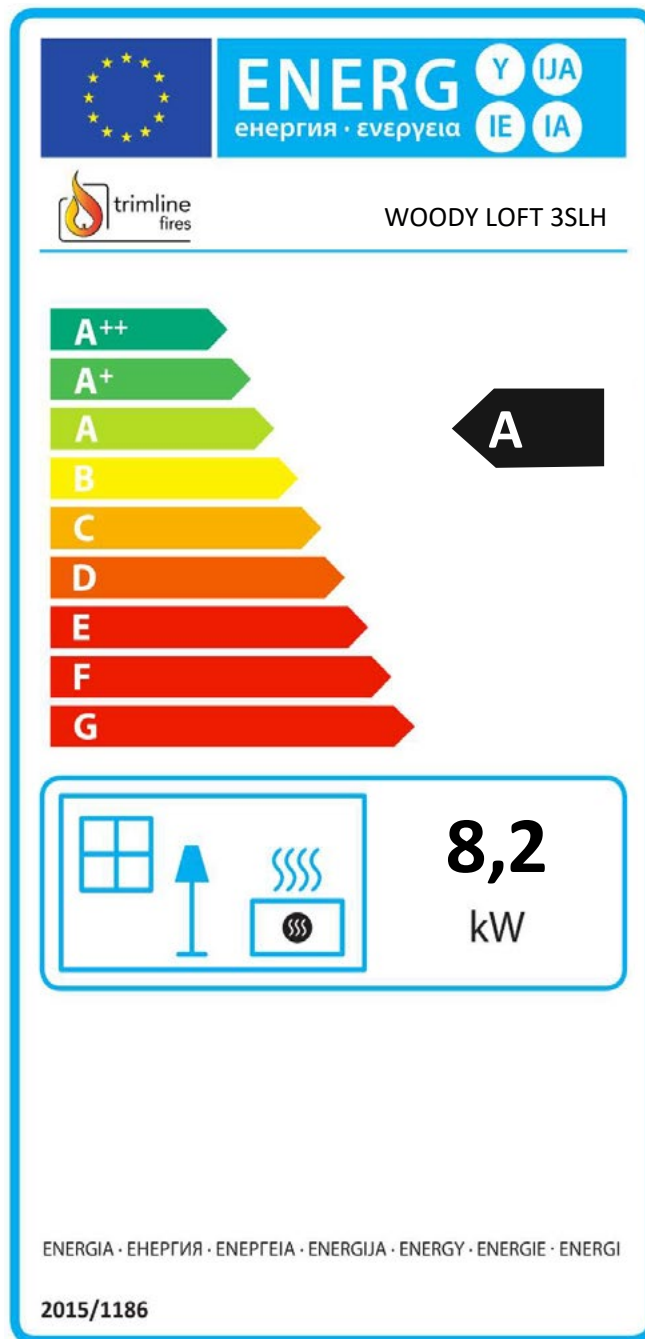



Trimline product data sheet	Woody Loft 3SL
Product data sheet in accordance with regulation according to (EU) 2015/1186	
The information on the product data sheet of the space heater appliance is provided in the order listed below and included in the product brochure or other written information supplied with the product.	

Manufacturer	thermoCet International B.V. Netherlands
Indication type	Woody Loft 3SLH
Energy efficiency class	A
Direct heat output	8.2
Indirect heat output	n/a
Energy Efficiency Index (EEI)	102,7
Useful efficiency at nominal heat output	76.6
Any specific precautions to be taken when assembling, installing or maintaining the space heater.	Fire safety measures such as safety distances: when installing, national standards, local codes and regulations. Read the installation and operating instructions
thermoCet International B.V. Laagerfseweg 27 3931 PC Woudenberg Netherlands	



Trimline product data sheet	Woody Loft 3SLH
Product data sheet in accordance with regulation according to (EU) 2015/1186	
The information on the product data sheet of the space heater appliance is provided in the order listed below and included in the product brochure or other written information supplied with the product.	

Manufacturer	thermoCet International B.V. Netherlands
Indication type	Woody Loft 3SLH
Energy efficiency class	A
Direct heat output	8.2
Indirect heat output	n/a
Energy Efficiency Index (EEI)	102,7
Useful efficiency at nominal heat output	76.6
Any specific precautions to be taken when assembling, installing or maintaining the space heater.	Fire safety measures such as safety distances: when installing, national standards, local codes and regulations. Read the installation and operating instructions
thermoCet International B.V. Laagerfseweg 27 3931 PC Woudenberg Netherlands	

Appendix 12 WOODY LOFT 3SL PRODUCT INFORMATION

Product information according to Regulation (EU) 2015/1185 – Technical documentation (EU) 2015/1186													
Manufacturer	thermoCet International B.V. Netherlands				ECO DESIGN								
Indication type	WOODY LOFT 3SL												
Equivalent models													
Harmonised standard	EN 13240:2001 + A2:2004				EN 16510-1:2022		EN 16510-2-1:2022		Defra				
Laboratory	SGS: 1639												
Laboratory address	SGS BELGIUM NV-LOCATION ARNHEM												
Laboratory report	EZKA/2025-02/00010-1				EZKA/2025-02/00010-2								
Indirect heating functionality	no												
Direct heat output	8.2 kW												
Indirect heat output	x kW												
Fuel				Preferred fuel (one only):	Other suitable fuels	Space heating output at nominal heat output ((*) [mg/Nm ³ (13%O ₂)				Space heating output at minimum heat output (**) [mg/Nm ³ (13%O ₂)			
						PM _{nom}	OGC _{nom}	CO _{nom}	NO _{xnom}	PM _{slow}	OGC _{slow}	CO _{slow}	NO _{xslow}
Chopped logs, moisture content less than 25%				yes	no	35	49	926	108	n.v.t	n/a	n/a	n/a
Compressed wood, moisture content less than 12%				no	no								
Other wooden materials				no	no								
Non-wooden biomass				no	no								
Anthracite and lean coal				no	no								
Hard cokes				no	no								
Low temperature cokes				no	no								
Bituminous coal				no	no								
Brown coal briquettes				no	no								
Peat briquettes				no	no								
Briquettes of mixed fossil fuels				no	no								
Other fossil fuels				no	no								
Briquettes of biomass mixed with fossil fuels				no	no								
Other mixtures of biomass and fossil fuels				no	no								
Characteristics when using only the preferred fuel													
Seasonal energy efficiency for space heating				η _s	67.6	%							
Energy Efficiency Index (EEI)	102.07												
Energy efficiency class	A												
Heat output													
Nominal heat output	Symbol	Value	Unit	Useful efficiency (NCV as received)				Symbol	Value	Unit			
Nominal heat output	P _{nom}	8.2	kW	Useful efficiency at nominal heat output				η _{th, nom}	76.6	%			
Minimum heat output (indicative)	P _{min}	n/a	kW	Useful efficiency at minimal heat output (indicative)				η _{th, min}	n/a	%			
Supplementary electricity consumption				Heat output type/room temperature control(one)									
For nominal heat output	el _{max}	n/a	kW	Single heat output, no control of room temperature						no			
For minimal heat output	el _{min}	n/a	kW	Two or more manually-adjustable stages, no control of the room temperature						yes			
In stand-by-mode	el _{SB}	n/a	kW	With mechanical control of room temperature by thermostat						no			
Power requirement for the permanent pilot flame				With electronic control of room temperature						no			
Power requirement for the permanent pilot flame (if applicable)	P pilot	n/a	kW	With electronic control of room temperature plus day-time switch						no			
				With electronic control of room temperature plus week-time switch						no			
				Other control options (multiple selections possible)									
				Control of room temperature, with presence detection						no			
				Room temperature control, with open window detection						no			
				With the option of remote control						no			
Contact details		thermoCet International B.V. Laagerfseweg 27 3931 PC Woudenberg Netherlands				www.thermoCet.nl							
PM = particulate matter, OGC = organic gaseous compounds, CO = carbon monoxide, NO _x = nitrous oxides (**). (**) Required only if correction factor F(2) or F(3) is used.													

Product information according to Regulation (EU) 2015/1185 – Technical documentation (EU) 2015/1186

Manufacturer	thermoCet International B.V. Netherlands	ECO DESIGN		
Indication type	WOODY LOFT 3SLH			
Equivalent models				
Harmonised standard	EN 13240:2001 + A2:2004	EN 16510-1:2022	EN 16510-2-1:2022	Defra

Laboratory	SGS: 1639											
Laboratory address	SGS BELGIUM NV-LOCATION ARNHEM											
Laboratory report	EZKA/2025-02/00010-1		EZKA/2025-02/00010-2									
Indirect heating functionality	no											
Direct heat output	8.2	kW										
Indirect heat output	x	kW										
Fuel			Preferred fuel (one only):	Other suitable fuels	Space heating output at nominal heat output ((*) [mg/Nm3 (13%O ₂)				Space heating output at minimum heat output (*) (**) [mg/Nm3 (13%O ₂)			
					PMnom	OGCnom	COnom	NOXnom	PMslow	OGCslow	Coslow	NOxslow
Chopped logs, moisture content less than 25%			yes	no	35	49	926	108	n.v.t	n/a	n/a	n/a
Compressed wood, moisture content less than 12%			no	no								
Other wooden materials			no	no								
Non-wooden biomass			no	no								
Anthracite and lean coal			no	no								
Hard cokes			no	no								
Low temperature cokes			no	no								
Bituminous coal			no	no								
Brown coal briquettes			no	no								
Peat briquettes			no	no								
Briquettes of mixed fossil fuels			no	no								
Other fossil fuels			no	no								
Briquettes of biomass mixed with fossil fuels			no	no								
Other mixtures of biomass and fossil fuels			no	no								

Characteristics when using only the preferred fuel

Seasonal energy efficiency for space heating	η _s	67.6	%
Energy Efficiency Index (EEI)	102.07		
Energy efficiency class	A		

		Symbol	Value	Unit				Symbol	Value	Unit
Heat output					Useful efficiency (NCV as received)					
Nominal heat output		P _{nom}	8.2	kW	Useful efficiency at nominal heat output			η _{th,nom}	76.6	%
Minimum heat output (indicative)		P _{min}	n/a	kW	Useful efficiency at minimal heat output (indicative)			η _{th,min}	n/a	%
Supplementary electricity consumption					Heat output type/room temperature control(one)					
For nominal heat output		el _{max}	n/a	kW	Single heat output, no control of room temperature					no
For minimal heat output		el _{min}	n/a	kW	Two or more manually-adjustable stages, no control of the room temperature					yes
In stand-by-mode		el _{SB}	n/a	kW	With mechanical control of room temperature by thermostat					no
Power requirement for the permanent pilot flame				With electronic control of room temperature					no	
Power requirement for the permanent pilot flame (if applicable)		P pilot	n/a	kW	With electronic control of room temperature plus day-time switch					no
					With electronic control of room temperature plus week-time switch					no
					Other control options (multiple selections possible)					
					Control of room temperature, with presence detection					no
				Room temperature control, with open window detection					no	
				With the option of remote control					no	
Contact details		thermoCet International B.V. Laagerfseweg 27 3931 PC Woudenberg Netherlands				www.thermoCet.nl				
PM = particulate matter, OGC = organic gaseous compounds, CO = carbon monoxide, NO _x = nitrous oxides (**). (**) Required only if correction factor F(2) or F(3) is used.										

PM = particulate matter, OGC = organic gaseous compounds, CO = carbon monoxide, NO_x = nitrous oxides (**).
 (**) Required only if correction factor F(2) or F(3) is used.

